


# SPECTRA™



## PROGRAMMING GUIDE

### SPECTRA CONTROL PANELS V1.2

1728 AND 1728EX

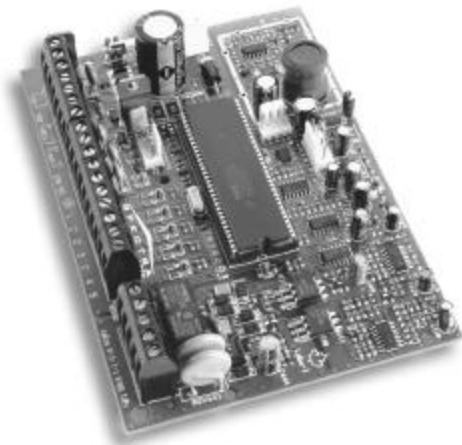

1758 AND 1758EX





# TABLE OF CONTENTS

<b>HOW DO I PROGRAM THE SYSTEM?</b> .....	<b>4</b>
Single Digit Data Entry Method (Hexadecimal and decimal) .....	4
Multiple Feature Select Programming Method .....	4
Data Display Mode (LED Keypads Only) .....	5
Paradox Memory Key .....	5
<b>ZONE PROGRAMMING</b> .....	<b>6</b>
What is an Expansion Input? .....	6
How Do I Program the Zones? .....	7
<b>SYSTEM TIMERS</b> .....	<b>8</b>
<b>HOW DO I SET THE PROGRAMMABLE OUTPUTS?</b> .....	<b>9</b>
<b>SYSTEM OPTIONS</b> .....	<b>12</b>
SECTION [127]: General Options .....	12
SECTION [130]: Arming/Disarming Options .....	12
SECTION [132]: Zone Options .....	13
SECTION [133]: Partition 1 Options .....	13
SECTION [134]: Partition 2 Options .....	14
SECTION [135]: Dialer Options .....	14
SECTION [137]: Event Call Direction .....	14
<b>COMMUNICATION SETTINGS</b> .....	<b>15</b>
<b>REPORT CODES</b> .....	<b>16</b>
Arming Report Codes .....	16
Disarming Report Codes .....	16
Alarm Report Codes .....	17
Tamper Report Codes .....	17
System Trouble Report Codes .....	17
Programmable - Ademco Contact ID Report Code List .....	18
All Codes - Ademco Contact ID Report Code List .....	19
<b>SYSTEM SETTINGS</b> .....	<b>20</b>
<b>USER CODE OPTIONS</b> .....	<b>21</b>
<b>LIBERATOR WIRELESS BUS MODULE (SPC-319)</b> .....	<b>22</b>
Wireless Transmitter Assignment (Liberator Only) .....	22
Wireless Module Options (Liberator Only) .....	22
PGM Programming (Liberator Only) .....	23
Serial Number Display .....	23
Signal Strength Display .....	24
Liberator Module (SPC-319) Reset .....	24
<b>ZONE EXPANSION MODULES (SPC-ZX4/8)</b> .....	<b>25</b>
SECTION [650]: Options .....	25
SECTION [651]: Zone Assignment .....	25
PGM Timer (Zone Module SPC-ZX8 Only) .....	25
PGM Programming (Zone Module SPC-ZX8 Only) .....	26
Reset Zone Expansion Module .....	26

<b>REMOTE CONTROL PROGRAMMING .....</b>	<b>27</b>
User Assignment .....	27
Button Programming .....	27
Remote Control Assignment (Liberator Only) .....	28
Remote Control Assignment (1758 and 1758EX Panels Only) .....	28
Reprogram ALL Modules .....	28
Paradox Memory Key .....	28
<b>USER OPERATION .....</b>	<b>29</b>
Trouble Display .....	29
Partitioning .....	30
Programming Access Codes .....	30
Disarming & Deactivating an Alarm .....	31
Regular Arming .....	31
Stay Arming .....	31
Instant Arming .....	32
Force Arming .....	32
Manual Bypass Programming .....	32
Bypass Recall Feature .....	33
One-Touch Arming .....	33
Keyswitch Arming .....	33
Panic Alarms .....	33
Auto-Arming .....	34
Alarm Memory Display .....	34
Programming Chime Zones .....	34
Keypad Muting .....	34
Quick Function Keys .....	34
<b>HARDWARE CONNECTIONS .....</b>	<b>35</b>
Single Zone Inputs .....	35
Double Zone Inputs (with ATZ option only) .....	35
Connecting a Keyswitch .....	36
Connecting Fire Circuits .....	36
PGM Connections .....	36
Connecting A Liberator Wireless Bus Module (SPC-319) .....	37
Connecting A Zone Expansion Module (SPC-ZX4 and SPC-ZX8) .....	37
Spectra 1728 and 1728EX PCB Layout .....	38
Spectra 1758 and 1758EX PCB Layout .....	39
Connecting More Than Two Keypads .....	39



# HOW DO I PROGRAM THE SYSTEM?

The **Spectra**<sup>TM</sup> series control panels can be programmed using the *WinLoad Software* or by using any keypad connected to the **Spectra** control panel. For information on the WinLoad Software, please refer to the *Spectra Installation & Reference Manual*. To program the **Spectra** control panel using a keypad, you must enter the *Programming Mode* as shown below. Once a control panel has been programmed, you can use the **Paradox Memory Key** to copy the contents from the programmed control panel to one or more control panels (see page 5).

**Default Installer Code: 000000** (see section [281] on page 20)  
**Default System Master Code: 123456** (see section [301] on page 21)

**To enter Programming Mode:**

**STEP 1:** Press [ENTER]

**STEP 2:** Enter your [INSTALLER CODE]

**STEP 3:** Enter 3 digits of [SECTION] you wish to program

**STEP 4:** Enter required [DATA]

## SINGLE DIGIT DATA ENTRY METHOD (Hexadecimal and Decimal)

*Single Digit Data Entry* is used in all sections except those specified in *Multiple Feature Select Programming Method*. After entering the programming mode as described in the shaded box above, some sections will require that you enter **Decimal** values from **000 to 255**. Other sections will require that you enter **Hexadecimal** values from **0 to F**. The required data will be clearly indicated in this manual. When entering the final digit in a section, the control panel will automatically save and advance to the next section. With the exception of sections 001 to 016, where after entering the first two digits, the control panel will switch to *Multiple Feature Select Programming*.

Table 1: Decimal and Hexadecimal Programming Table

Value or Action	What Do I Press?	What Do I See?		
		10-Zone LED	16-Zone LED	LCD
Values 1 to 9	[1] to [9]	[1] to [9]	[1] to [9]	[1] to [9]
A (hexa only)	[0]	[0 (10)]	[10]	A
B (hexa only)	[STAY]	[STAY]	[11]	B
C (hexa only)	[BYP]	[BYP]	[12]	C
D (hexa only)	[MEM]	[MEM]	[13]	D
E (hexa only)	[TBL] / [TRBL]	[TBL]	[14]	E
F (hexa only)	[PG] / [FNC1]	[PG]	[15]	F
Erase Current Digit	[FORCE]	Displays next digit or next section		
Exit Without Saving	[CLEAR]	[ENTER] flashes	[ARM1] & [STAY1] flash	"SECTION [ ]"
Save Data (hexa only)	[ENTER]	Advances to the next section		

## MULTIPLE FEATURE SELECT PROGRAMMING METHOD


Sections: [001] to [016], [127] to [138], [302] to [348], [610], [650] to [651]

After entering the programming mode as described in the shaded box above, each option from **[1]** to **[8]** will represent a specific feature or option. Press the key corresponding to the desired option and the corresponding light will illuminate or the option number will appear in the LCD display. This means the option is on. Press the key again to extinguish the corresponding light or remove the digit from the LCD display, thereby, turning off the option. Please note that pressing the **[FORCE]** key will set all 8 options to "off". Press the keys as many times as you need until all 8 options in the current section are set. When the options are set, press the **[ENTER]** key to save and advance to the next section.

## DATA DISPLAY MODE (LED Keypads Only)

In the *Data Display Mode* you can view the programmed contents of each section one digit at a time. After entering the desired 3-digit section (see step 3 of the “To Enter Programming Mode” box on the previous page), press the [ENTER] key to access the *Data Display Mode*. This mode will not function with sections using the *Multiple Feature Select Programming Method* (see previous page).

To access the *Data Display Mode*, press the [ENTER] key after entering a section and before entering any data. The three LEDs as indicated below will begin to flash indicating that you are in the *Data Display Mode*.

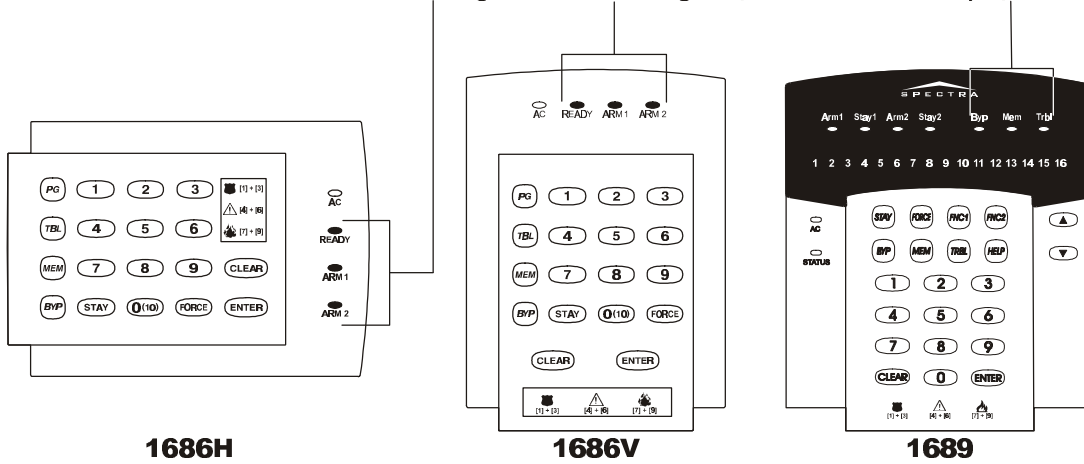


Each time the [ENTER] key is pressed, the keypad will display the next digit in the current section and will continue through all the following sections one digit at a time without changing the programmed values. Not available for sections using the *Multiple Feature Select Method*. Press the [CLEAR] key at any time to exit the *Data Display Mode*.

## PARADOX MEMORY KEY


Copy the programmed contents of one Spectra control panel into the *Paradox Memory Key*. Then copy the contents of the *Paradox Memory Key* into as many Spectra control panels as you need. Each control panel is programmed in less than 3 seconds.

**!** If you use the Memory Key to download to a Spectra 1758 or 1758EX, you will have to reassign the remote controls (see page 28).

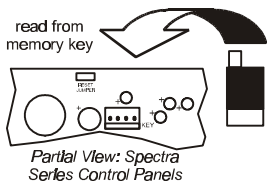


Download to DESTINATION Control Panel

- 1) Remove AC and battery power from the control panel.
- 2) Insert the *Memory Key* onto the serial connector labeled “KEY” on the Spectra control panel to which you wish to download the contents of the memory key to.
- 3) Reapply AC and battery power.
- 4) Enter installer programming mode, enter section **[900]**, then press [ENTER] to acknowledge.
- 5) When the keypad emits a “confirmation beep”, remove the *Memory Key*.

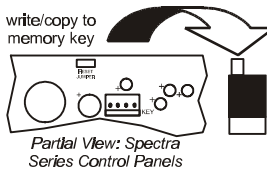

Copy to Memory Key from SOURCE Control Panel

- 1) Remove AC and battery power from the control panel.
- 2) Insert *Memory Key* onto the serial connector labeled “KEY” on the Spectra control panel from which you wish to copy. Make sure the write protect jumper of the Memory Key is on.
- 3) Reapply AC and battery power.
- 4) Enter installer programming mode, enter section **[902]**, then press [ENTER] to acknowledge.
- 5) When the keypad emits a “confirmation beep”, remove the *Memory Key*. Remove the *Memory Key*'s jumper if you do not wish to accidentally overwrite its contents.

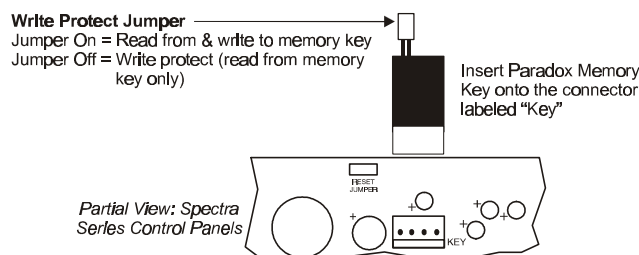

# ZONE PROGRAMMING

When programming zones please note that the Spectra control panels' zone assignment is dependent on where the detection devices in the system are connected (see Table 2 below).

Table 2: Zone Recognition Table

Device connected to which input?	1728EX 1758EX	1728 1758
	NO ATZ	WITH ATZ
Control Panel Input 1 =	Zone 1	Zone 1 & 6
Control Panel Input 2 =	Zone 2	Zone 2 & 7
Control Panel Input 3 =	Zone 3	Zone 3 & 8
Control Panel Input 4 =	Zone 4	Zone 4 & 9
Control Panel Input 5 =	Zone 5	Zone 5 & 10
Keypad Zone 1 =	Zone 6	Zone 11
Keypad Zone 2 =	Zone 7	Zone 12
Expansion Input 1 =	Zone 8	Zone 13
Expansion Input 2 =	Zone 9	Zone 14
Expansion Input 3 =	Zone 10	Zone 15
Expansion Input 4 =	Zone 11	Zone 16
Expansion Input 5 =	Zone 12	N/A
Expansion Input 6 =	Zone 13	N/A
Expansion Input 7 =	Zone 14	N/A
Expansion Input 8 =	Zone 15	N/A

## WHAT IS AN EXPANSION INPUT?

There are a total of eight expansion inputs available. Each hardwired input on a Zone Expansion Module or wireless transmitter used by the Liberator™ Wireless Bus Module can be assigned to an expansion input. The expansion inputs can be used in any combination. For example, you can assign four wireless transmitters as well as 4 hardwire inputs to the expansion inputs. Regardless of how many expansion modules are being used, **the control panel cannot support more than eight expansion inputs**. The expansion module inputs are assigned as follows:

### SPC-319 Liberator Wireless Bus Module

Wireless transmitters assigned to sections [601] to [608] of the control panel represent expansion inputs 1 to 8 respectively. Refer to *Wireless Transmitter Assignment* on page 22.

### SPC-ZX4 and SPC-ZX8 Zone Expansion Module

Detection devices connected to input terminals Z1 to Z4 of the SPC-ZX4 module or Z1 to Z8 of the SPC-ZX8 module, represent expansion inputs 1 to 8 respectively. Please note that the module's inputs must be enabled in section [651] of the control panel. Refer to *Zone Assignment* on page 25.



**Do not assign devices from different modules to the same expansion input. For example, do not assign a wireless transmitter to section [601], then connect a detection device to input Z1 of the SPC-ZX8 and enable option [1] in section [651].**



# HOW DO I PROGRAM THE ZONES?

- STEP 1: Press the [ENTER] key
- STEP 2: Enter the [INSTALLER CODE] (Default: 000000)
- STEP 3: Enter 3-digit [SECTION]
- STEP 4: Enter one digit from the **Zone Definition** table
- STEP 5: Enter one digit from the **Partition Assignment** table
- STEP 6: Select one or more options from the **Zone Options** table
- STEP 7: Press the [ENTER] key

ZONE DEFINITION	
Empty	- Zone Disabled
1	- Entry Delay 1
2	- Entry Delay 2
3	- Follow
4	- Instant
5	- 24Hr. Burglary Keyswitch Input <i>if zone 2</i> 24Hr. Fire <i>if zone 3</i>
6	- 24Hr. Buzzer Delayed Fire <i>if zone 3</i>

PARTITION ASSIGNMENT	
Empty	- Zone Disabled
1	- Partition 1
2	- Partition 2

ZONE OPTIONS	
1 -	Auto Zone Shutdown
2 -	Bypassable Zone
3 -	Stay Zone
4 -	5 - <u>Zone Alarm Type</u>
off off	Audible alarm (steady)
off on	Audible alarm (pulsed)
on off	Silent alarm
on on	Generates a report only
6 -	Intellizone
7 -	Delay alarm transmission
8 -	Force Zone
KEYSWITCH OPTIONS	
<i>Only if zone 2 = keyswitch zone</i>	
1 - off	= Maintained
on	= Momentary
2 - off	= Regular Arm
on	= Stay Arm



[FORCE] key = empty

Section #	Description	Zone Definition <i>First Digit</i>	Partition Assignment <i>Second Digit</i>	Zone Options <i>Feature Select</i>
[001]	= Zone 1: _____	_____	_____	1 2 3 4 5 6 7 8
[002]	= Zone 2: _____	_____	_____	1 2 3 4 5 6 7 8
[003]	= Zone 3: _____	_____	_____	1 2 3 4 5 6 7 8
[004]	= Zone 4: _____	_____	_____	1 2 3 4 5 6 7 8
[005]	= Zone 5: _____	_____	_____	1 2 3 4 5 6 7 8
[006]	= Zone 6: _____	_____	_____	1 2 3 4 5 6 7 8
[007]	= Zone 7: _____	_____	_____	1 2 3 4 5 6 7 8
[008]	= Zone 8: _____	_____	_____	1 2 3 4 5 6 7 8
[009]	= Zone 9: _____	_____	_____	1 2 3 4 5 6 7 8
[010]	= Zone 10: _____	_____	_____	1 2 3 4 5 6 7 8
[011]	= Zone 11: _____	_____	_____	1 2 3 4 5 6 7 8
[012]	= Zone 12: _____	_____	_____	1 2 3 4 5 6 7 8
[013]	= Zone 13: _____	_____	_____	1 2 3 4 5 6 7 8
[014]	= Zone 14: _____	_____	_____	1 2 3 4 5 6 7 8
[015]	= Zone 15: _____	_____	_____	1 2 3 4 5 6 7 8
[016]	= Zone 16: _____	_____	_____	1 2 3 4 5 6 7 8

Default = Empty

Default = 1

Default = 1 & 2 on

# SYSTEM TIMERS

Section #	Decimal Value (000-255)	Description	Default Value
[050]	___/___/___ x10 msec.	ZONE SPEED (ZONE 1)	600 msec.
[051]	___/___/___ x10 msec.	ZONE SPEED (ZONE 2)	600 msec.
[052]	___/___/___ x10 msec.	ZONE SPEED (ZONE 3)	600 msec.
[053]	___/___/___ x10 msec.	ZONE SPEED (ZONE 4)	600 msec.
[054]	___/___/___ x10 msec.	ZONE SPEED (ZONE 5)	600 msec.
[055]	___/___/___ X10 msec.	ZONE SPEED (ZONE 6)	600 msec.
[056]	___/___/___ X10 msec.	ZONE SPEED (ZONE 7)	600 msec.
[057]	___/___/___ X10 msec.	ZONE SPEED (ZONE 8)	600 msec.
[058]	___/___/___ X10 msec.	ZONE SPEED (ZONE 9)	600 msec.
[059]	___/___/___ x10 msec.	ZONE SPEED (ZONE 10)	600 msec.
[060]	___/___/___ x10 msec.	ZONE SPEED (ZONE 11)	600 msec.
[061]	___/___/___ x10 msec.	ZONE SPEED (ZONE 12)	600 msec.
[062]	___/___/___ x10 msec.	ZONE SPEED (ZONE 13)	600 msec.
[063]	___/___/___ x10 msec.	ZONE SPEED (ZONE 14)	600 msec.
[064]	___/___/___ x10 msec.	ZONE SPEED (ZONE 15)	600 msec.
[065]	___/___/___ x10 msec.	ZONE SPEED (ZONE 16)	600 msec.
<b>NOTE: If ATZ is enabled (section [132], key [5]), do not set the Zone Speed to less than 50msec. as this may cause false alarms.</b>			
[066]	___/___/___ seconds (000 = follow stop event)	PGM1 TIMER	5 sec.
[067]	___/___/___ seconds (000 = follow stop event)	PGM2 TIMER (1758/EX ONLY)	5 sec.
[068]	___/___/___ seconds (000 = follow stop event)	GLOBAL PGM TIMER (SEE PAGE 23 & 26)	5 sec.
[069]	___/___/___ seconds	ENTRY DELAY 1	45 sec.
[070]	___/___/___ seconds	ENTRY DELAY 2	45 sec.
[071]	___/___/___ seconds	EXIT DELAY 1	30 sec.
[072]	___/___/___ seconds	EXIT DELAY 2	30 sec.
[073]	___/___/___ minutes (000 = no bell on alarm)	BELL CUT-OFF TIME - PARTITION 1	4 min.
[074]	___/___/___ minutes (000 = no bell on alarm)	BELL CUT-OFF TIME - PARTITION 2	4 min.
[075]	___/___/___ x15 minutes (000 = disabled)	NO MOVEMENT TIME - PARTITION 1	Disabled
[076]	___/___/___ x15 minutes (000 = disabled)	NO MOVEMENT TIME - PARTITION 2	Disabled
[077]	___/___/___ seconds (min.= 10 sec.)	ANS. MACHINE OVERRIDE DELAY	Disabled
[078]	___/___/___ (000 = no answer; max. = 15 rings)	NUMBER OF RINGS	8 rings
[079]	___/___/___ x2 sec. (min.= 32 sec.)	TLM FAIL TIMER	32 sec.
[080]	___/___/___ seconds	DELAY ALARM TRANSMISSION	Disabled
[081]	___/___/___ (000 = 16; max. 16)	MAXIMUM DIALING ATTEMPTS	8 attempts
[082]	___/___/___ seconds	DELAY BETWEEN ATTEMPTS	20 sec.
[083]	___/___/___ seconds	PAGER DELAY	5 sec.
[084]	___/___/___ seconds (min. 10 sec.)	INTELLIZONE DELAY	48 sec.
[085]	___/___/___ seconds	RECENT CLOSING DELAY	No delay
[086]	___/___/___ minutes	POWER FAILURE REPORT DELAY	15 min.
[087]	___/___/___ days (000 = disabled)	AUTO TEST REPORT	Disabled
[088]	___/___/___ (001-127 = +1 to +127 sec.) (128-255 = -1 to -127 sec.)	CLOCK ADJUST	Disabled
[089]	___/___/___ (000 = Disabled; max. = 15)	AUTO ZONE SHUTDOWN COUNTER	5
[090]	___/___/___ minutes (000 = disabled)	RECYCLE ALARM DELAY	Disabled
[091]	___/___/___ (000 = disabled)	RECYCLE ALARM COUNTER	Disabled
[110]	___/___:___/___ Hrs (00-23) & Min. (00-59)	AUTO TEST REPORT (TIME OF DAY)	Disabled
[111]	___/___:___/___ Hrs (00-23) & Min. (00-59)	AUTO-ARM TIME - PARTITION 1	Disabled
[112]	___/___:___/___ Hrs (00-23) & Min. (00-59)	AUTO-ARM TIME - PARTITION 2	Disabled

# HOW DO I SET THE PROGRAMMABLE OUTPUTS?

Example: section [120] = 05 03 02: this means PGM1 will activate whenever partition 2 is Stay Armed.

Section #	Event Group #	Sub-Group #	Partition #
[120] = PGM1 Start Event	___/___	___/___	___/___
[121] = PGM1 Stop Event <i>Can be used as another Start Event if section [066] is programmed with a value other than 000.</i>	___/___	___/___	___/___
[122] = PGM2 Start Event	___/___	___/___	___/___
[123] = PGM2 Stop Event <i>Can be used as another Start Event if section [067] is programmed with a value other than 000.</i>	___/___	___/___	___/___
[124] = Global PGM Start Event	___/___	___/___	___/___
[125] = Global PGM Stop Event <i>Used to activate PGMs on expansion modules and LCD keypads (see page 22 and page 25)</i>	___/___	___/___	___/___

01 = Partition 1  
02 = Partition 2  
99 = Any Partition

*Sub-Groups preceded by (Partition 1 only) cannot be assigned to activate in partition 2.*

Event Group #	Sub-Group #
<b>00 = Zone OK</b>	01-16 = Zones 1 to 16 99 = Any Zone
<b>01 = Zone Open</b>	01-16 = Zones 1 to 16 99 = Any Zone
<b>02 = Partition Status</b>	00 = System not ready ( <i>Partition 1 only</i> ) 01 = System ready ( <i>Partition 1 only</i> ) 02 = Steady Alarm in Partition 03 = Pulsed Alarm in Partition 04 = Pulsed or Steady Alarm in Partition 05 = Alarm in Partition Restored 06 = Bell Squawk Activated ( <i>Partition 1 only</i> ) 07 = Bell Squawk Deactivated ( <i>Partition 1 only</i> ) 99 = Any Sub-Group
<b>03 = Global Disarm with User Code</b>	01-48 = User Code Numbers 001 to 048 99 = Any User Code
<b>04 = Special Global Disarm</b>	00 = Disarm with WinLoad Software 01 = Disarm with Keyswitch 99 = Any Sub-Group
<b>05 = Non-Reportable Events</b>	00 = Telephone Line Trouble ( <i>Partition 1 only</i> ) 01 = [PG] or [FNC1] key was pressed ( <i>Partition 1 only</i> ) 02 = Instant Arming 03 = Stay Arming 04 = Force Arming 05 = Fast Exit (Force & Regular Only) 06 = PC Fail to Communicate ( <i>Partition 1 only</i> ) 07 = Midnight ( <i>Partition 1 only</i> ) 08 = Ground start ( <i>Partition 1 only</i> ) 99 = Any Sub-Group ( <i>Partition 1 only, except 02 to 05</i> )

Event Group #	Sub-Group #
<b>06 = Arm/Disarm with Remote Control</b>	01-08 = Remote Controls 1 to 8 99 = Any Remote Control
<b>07 = Button Pressed on Remote</b> (see button option "B" on page 27)	01-08 = Remote Controls 1 to 8 99 = Any Remote Control
<b>08 = Button Pressed on Remote</b> (see button option "C" on page 27)	01-08 = Remote Controls 1 to 8 99 = Any Remote Control
<b>09 = Button Pressed on Remote</b> (see button option "D" on page 27)	01-08 = Remote Controls 1 to 8 99 = Any Remote Control
<b>10 = Bypass Programming</b>	01-48 = User Code Numbers 001 to 048 99 = Any User Code
<b>11 = User Activated PGM</b>	01-48 = User Code Numbers 001 to 048 99 = Any User Code
<b>12 = Zone with Delay Transmission Option Enabled is Breached</b>	01-16 = Zones 1 to 16 99 = Any Zone
<b>13 = Arm with User Code</b>	01-48 = User Code Numbers 001 to 048 99 = Any User Code
<b>14 = Special Arm</b>	00 = Auto Arming (timed/no movement) 01 = Late to Close (auto arming failed) 02 = No Movement Auto Arming 03 = Partial Arming (stay, force, instant, bypass) 04 = One-Touch Arming 05 = Arm with WinLoad Software 06 = Arm with Keyswitch 99 = Any Sub-Group
<b>15 = Disarm with User Code</b>	01-48 = User Code Numbers 001 to 048 99 = Any User Code
<b>16 = Disarm After Alarm w/ User Code</b>	01-48 = User Code Numbers 001 to 048 99 = Any User Code
<b>17 = Cancel Alarm with User Code</b>	01-48 = User Code Numbers 001 to 048 99 = Any User Code
<b>18 = Special Disarm</b>	00 = Cancel Auto Arm (timed/no movement) 01 = Disarm with WinLoad Software 02 = Disarm with Keyswitch 03 = Reserved for Future Use 04 = Disarm after alarm with WinLoad Software 05 = Disarm after alarm with Keyswitch 06 = Cancel Alarm with WinLoad Software 07 = Cancel Alarm with Keyswitch 99 = Any Sub-Group
<b>19 = Zone Bypassed on Arming</b>	01-16 = Zones 1 to 16 99 = Any Zone
<b>20 = Zone in Alarm</b>	01-16 = Zones 1 to 16 99 = Any Zone
<b>21 = Fire Alarm</b>	03 = Zone 3 99 = Any Zone
<b>22 = Zone Alarm Restore</b>	01-16 = Zones 1 to 16 99 = Any Zone
<b>23 = Fire Alarm Restore</b>	03 = Zone 3 99 = Any Zone

Event Group #	Sub-Group #
<b>24 = Special Alarm</b>	00 = Emergency Panic 01 = Auxiliary Panic 02 = Fire Panic 03 = Recent Closing 04 = Auto Zone Shutdown 05 = Duress Alarm 99 = Any Sub-Group
<b>25 = Auto Zone Shutdown</b>	01-16 = Zones 1 to 16 99 = Any Zone
<b>26 = Zone Tamper</b>	01-16 = Zones 1 to 16 99 = Any Zone
<b>27 = Zone Tamper Restore</b>	01-16 = Zones 1 to 16 99 = Any Zone
<b>28 = System Trouble</b>	01 = AC Loss: only after <i>Power Failure Delay</i> has elapsed ( <i>Partition 1 only</i> ) 02 = Battery Failure ( <i>Partition 1 only</i> ) 03 = Auxiliary current overload ( <i>Partition 1 only</i> ) 04 = Bell current overload ( <i>Partition 1 only</i> ) 05 = Bell disconnected ( <i>Partition 1 only</i> ) 06 = Timer Loss ( <i>Partition 1 only</i> ) 07 = Fire Loop Trouble ( <i>Partition 1 only</i> ) 08 = Wireless Transmitter Low Battery ( <i>Partition 1 only</i> ) 09 = Module Fault ( <i>Partition 1 only</i> ) 10 = Printer Fault ( <i>Partition 1 only</i> ) 11 = Fail to Communicate ( <i>Partition 1 only</i> ) 99 = Any Sub-Group ( <i>Partition 1 only</i> )
<b>29 = System Trouble Restore</b>	00 = TLM restore ( <i>Partition 1 only</i> ) 01 = AC Loss restore ( <i>Partition 1 only</i> ) 02 = Battery Failure restore ( <i>Partition 1 only</i> ) 03 = Auxiliary current overload restore ( <i>Partition 1 only</i> ) 04 = Bell current overload restore ( <i>Partition 1 only</i> ) 05 = Bell disconnected restore ( <i>Partition 1 only</i> ) 06 = Timer Programmed ( <i>Partition 1 only</i> ) 07 = Fire Loop Trouble restore ( <i>Partition 1 only</i> ) 08 = Wireless Transmitter Low Battery restore ( <i>Partition 1 only</i> ) 09 = Module Fault restore ( <i>Partition 1 only</i> ) 10 = Printer Fault restore ( <i>Partition 1 only</i> ) 11 = Fail to Communicate restore ( <i>Partition 1 only</i> ) 99 = Any Trouble Restore ( <i>Partition 1 only</i> )
<b>30 = Special Reporting</b>	00 = System Power Up ( <i>Partition 1 only</i> ) 01 = Test Report ( <i>Partition 1 only</i> ) 02 = WinLoad Software Access ( <i>Partition 1 only</i> ) 03 = WinLoad Software Access finish ( <i>Partition 1 only</i> ) 04 = Installer enters programming mode ( <i>Partition 1 only</i> ) 05 = Installer exits programming mode ( <i>Partition 1 only</i> ) 99 = Any Sub-Group ( <i>Partition 1 only</i> )
<b>31 = Wireless Transmitter Supervision Loss</b>	01-16 = Zones 1 to 16 99 = Any Zone
<b>32 = Wireless Transmitter Supervision Loss Restore</b>	01-16 = Zones 1 to 16 99 = Any Zone

# SYSTEM OPTIONS

**Bold = Default Setting**

## SECTION [127]: General Options

Option	OFF	ON
[1] <i>Partitioning</i>	<input type="checkbox"/> Disabled	<input type="checkbox"/> Enabled
[2] <i>Access Code Length</i>	<input type="checkbox"/> 6-digits	<input type="checkbox"/> <b>4-digits</b>
[3] <i>Keypad Audible Trouble Warning</i>	<input type="checkbox"/> Disabled	<input type="checkbox"/> <b>Enabled</b>
[4] <i>Lock System Master Code</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[5] <i>Battery Charge Current</i>	<input type="checkbox"/> <b>350mA</b>	<input type="checkbox"/> 700mA
[6] <i>User Code 048 is a Duress Code</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[7] <i>Alarm Relay follows (1758/EX only)</i>	<input type="checkbox"/> <b>Bell Output</b>	<input type="checkbox"/> Global PGM
[8] <i>Normal State of PGM1</i>	<input type="checkbox"/> <b>Normally Closed (N.C.)</b>	<input type="checkbox"/> Normally Open

## SECTION [128]: General Options

Option	OFF	ON
[1] <i>Panic 1: Keys [1] &amp; [3]</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[2] <i>Panic 2: Keys [4] &amp; [6]</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[3] <i>Panic 3: Keys [7] &amp; [9]</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[4] <i>Panic 1: Silent or Audible</i>	<input type="checkbox"/> <b>Silent</b>	<input type="checkbox"/> Audible
[5] <i>Panic 2: Silent or Audible</i>	<input type="checkbox"/> <b>Silent</b>	<input type="checkbox"/> Audible
[6] <i>Panic 3: Silent or Fire</i>	<input type="checkbox"/> <b>Silent</b>	<input type="checkbox"/> Fire
[7] <i>Keypad 1 Tamper Supervision</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[8] <i>Keypad 2 Tamper Supervision</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled

## SECTION [129]: General Options

Option	OFF	ON
[1] <i>PGM2 Output Activation Option*</i>	<input type="checkbox"/> <b>Steady</b>	<input type="checkbox"/> Pulse (flash)
[2] <i>PGM2 Pulse Once Every 30sec. If System Armed*</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[3] <i>PGM2 Pulse On Arm, Twice On Disarm*</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[4] <i>SPC-ZX4/8 Zone Expansion Module Supervision</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[5] <i>SPC-319 Wireless Module Supervision</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[6] <i>SPC-319 Wireless Module Low Battery Super.</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[7] <i>Future Use</i>	<input type="checkbox"/> <b>N/A</b>	<input type="checkbox"/> N/A
[8] <i>Normal State of PGM2</i> <i>*1758 and 1758EX only</i>	<input type="checkbox"/> <b>Normally Closed (N.C.)</b>	<input type="checkbox"/> Normally Open

## SECTION [130]: Arming/Disarming Options

Option	OFF	ON
[1] <i>One-Touch Regular Arming</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[2] <i>One-Touch Stay Arming</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[3] <i>One-Touch Force Arming</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[4] <i>One-Touch Bypass Programming</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[5] <i>Restrict Arming on Battery Failure</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[6] <i>Restrict Arming on Tamper Trouble</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[7] <i>Bell Squawk on Arm/Disarm with Keypad</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[8] <i>Beep on Exit Delay</i>	<input type="checkbox"/> Disabled	<input type="checkbox"/> <b>Enabled</b>

## SECTION [131]: Arming/Disarming Options

Option	OFF	ON
[1] <i>Report Disarming</i>	<input type="checkbox"/> Always	<input type="checkbox"/> <b>Only after alarm</b>
[2] <i>Regular Arming Switches to Force Arming</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[3] <i>Bell Squawk on Arm/Disarm with Remote Control (must be enabled for UL installations)</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[4] <i>No Exit Delay When Arming with a Remote Control</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[5] <i>No Exit Delay Beeps and No Bell Squawk When Stay Arming</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[6] <i>Restrict Arming On Wireless Transmitter Supervision Loss</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[7] <i>Generate Supervision Loss if Detected on Bypassed Wireless Zone</i>	<input type="checkbox"/> <b>Yes</b>	<input type="checkbox"/> No
[8] <i>Normal State of Global PGM</i>	<input type="checkbox"/> <b>Normally Closed (N.C.)</b>	<input type="checkbox"/> Normally Open

## SECTION [132]: Zone Options

Option	OFF	ON													
[1]&[2]	<table border="1"> <thead> <tr> <th colspan="2">Tamper Recognition Options</th> </tr> <tr> <th>[1]</th> <th>[2]</th> </tr> </thead> <tbody> <tr> <td>OFF</td> <td>OFF—<b>Disabled (Default)</b></td> </tr> <tr> <td>OFF</td> <td>ON —When disarmed: GENERATES TROUBLE ONLY When armed: Follows <i>Zone Alarm Types</i> (page 7)</td> </tr> <tr> <td>ON</td> <td>OFF—When disarmed: GENERATES SILENT ALARM When armed: Follows <i>Zone Alarm Types</i> (page 7)</td> </tr> <tr> <td>ON</td> <td>ON —When disarmed: GENERATES AUDIBLE ALARM When armed: Follows <i>Zone Alarm Types</i> (page 7)</td> </tr> </tbody> </table>	Tamper Recognition Options		[1]	[2]	OFF	OFF— <b>Disabled (Default)</b>	OFF	ON —When disarmed: GENERATES TROUBLE ONLY When armed: Follows <i>Zone Alarm Types</i> (page 7)	ON	OFF—When disarmed: GENERATES SILENT ALARM When armed: Follows <i>Zone Alarm Types</i> (page 7)	ON	ON —When disarmed: GENERATES AUDIBLE ALARM When armed: Follows <i>Zone Alarm Types</i> (page 7)	<input type="checkbox"/> see table <input type="checkbox"/> see table	<input type="checkbox"/> see table <input type="checkbox"/> see table
Tamper Recognition Options															
[1]	[2]														
OFF	OFF— <b>Disabled (Default)</b>														
OFF	ON —When disarmed: GENERATES TROUBLE ONLY When armed: Follows <i>Zone Alarm Types</i> (page 7)														
ON	OFF—When disarmed: GENERATES SILENT ALARM When armed: Follows <i>Zone Alarm Types</i> (page 7)														
ON	ON —When disarmed: GENERATES AUDIBLE ALARM When armed: Follows <i>Zone Alarm Types</i> (page 7)														
[3] <i>Generate Tamper if detected on Bypassed Zone</i>	<input type="checkbox"/> <b>Yes</b>	<input type="checkbox"/> No													
[4] <i>EOL (end-of-line) Resistors</i>	<input type="checkbox"/> <b>No EOL</b>	<input type="checkbox"/> Use EOL Resistors													
[5] <i>ATZ Zone Doubling (optional)</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled													
[6] <i>Report Zone Restore</i>	<input type="checkbox"/> <b>On Bell Cut-off</b>	<input type="checkbox"/> On Zone Closure													
[7]&[8]	<table border="1"> <thead> <tr> <th colspan="2">Wireless Transmitter Supervision Options</th> </tr> <tr> <th>[7]</th> <th>[8]</th> </tr> </thead> <tbody> <tr> <td>OFF</td> <td>OFF—<b>Disabled (Default)</b></td> </tr> <tr> <td>OFF</td> <td>ON —When disarmed: GENERATES TROUBLE ONLY When armed: Follows <i>Zone Alarm Types</i> (page 7)</td> </tr> <tr> <td>ON</td> <td>OFF—When disarmed: GENERATES SILENT ALARM When armed: Follows <i>Zone Alarm Types</i> (page 7)</td> </tr> <tr> <td>ON</td> <td>ON —When disarmed: GENERATES AUDIBLE ALARM When armed: Follows <i>Zone Alarm Types</i> (page 7)</td> </tr> </tbody> </table>	Wireless Transmitter Supervision Options		[7]	[8]	OFF	OFF— <b>Disabled (Default)</b>	OFF	ON —When disarmed: GENERATES TROUBLE ONLY When armed: Follows <i>Zone Alarm Types</i> (page 7)	ON	OFF—When disarmed: GENERATES SILENT ALARM When armed: Follows <i>Zone Alarm Types</i> (page 7)	ON	ON —When disarmed: GENERATES AUDIBLE ALARM When armed: Follows <i>Zone Alarm Types</i> (page 7)	<input type="checkbox"/> see table <input type="checkbox"/> see table	<input type="checkbox"/> see table <input type="checkbox"/> see table
Wireless Transmitter Supervision Options															
[7]	[8]														
OFF	OFF— <b>Disabled (Default)</b>														
OFF	ON —When disarmed: GENERATES TROUBLE ONLY When armed: Follows <i>Zone Alarm Types</i> (page 7)														
ON	OFF—When disarmed: GENERATES SILENT ALARM When armed: Follows <i>Zone Alarm Types</i> (page 7)														
ON	ON —When disarmed: GENERATES AUDIBLE ALARM When armed: Follows <i>Zone Alarm Types</i> (page 7)														

## SECTION [133]: Partition 1 Options

Option	OFF	ON
[1] <i>Auto-Arm on Time</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[2] <i>Auto-Arm on No Movement</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[3] <i>Auto Arming = Regular or Stay</i>	<input type="checkbox"/> <b>Regular Arming</b>	<input type="checkbox"/> Stay Arming
[4] <i>Future Use</i>	<input type="checkbox"/> <b>N/A</b>	<input type="checkbox"/> N/A
[5] <i>Future Use</i>	<input type="checkbox"/> <b>N/A</b>	<input type="checkbox"/> N/A
[6] <i>Future Use</i>	<input type="checkbox"/> <b>N/A</b>	<input type="checkbox"/> N/A
[7] <i>Switch to Stay Arming if no entry delay is opened</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[8] <i>Future Use</i>	<input type="checkbox"/> <b>N/A</b>	<input type="checkbox"/> N/A



## SECTION [134]: Partition 2 Options

Option	OFF	ON
[1] <i>Auto-Arm on Time</i>	<input type="checkbox"/> Disabled	<input type="checkbox"/> Enabled
[2] <i>Auto-Arm on No Movement</i>	<input type="checkbox"/> Disabled	<input type="checkbox"/> Enabled
[3] <i>Auto Arming = Regular or Stay</i>	<input type="checkbox"/> <b>Regular Arming</b>	<input type="checkbox"/> Stay Arming
[4] <i>Future Use</i>	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A
[5] <i>Future Use</i>	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A
[6] <i>Future Use</i>	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A
[7] <i>Switch to Stay Arming if no entry delay is opened</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[8] <i>Future Use</i>	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A

## SECTION [135]: Dialer Options

Option	OFF	ON																
[1] <table border="1" data-bbox="233 659 732 814"> <tr> <th colspan="2">Telephone Line Monitoring (TLM) Options</th> </tr> <tr> <th>[1]</th> <th>[2]</th> </tr> <tr> <td>OFF</td> <td>OFF</td> <td>— TLM disabled (<b>Default</b>)</td> </tr> <tr> <td>OFF</td> <td>ON</td> <td>— TLM generates a trouble if armed</td> </tr> <tr> <td>ON</td> <td>OFF</td> <td>— TLM generates an audible alarm if armed</td> </tr> <tr> <td>ON</td> <td>ON</td> <td>— Silent alarms become audible</td> </tr> </table>	Telephone Line Monitoring (TLM) Options		[1]	[2]	OFF	OFF	— TLM disabled ( <b>Default</b> )	OFF	ON	— TLM generates a trouble if armed	ON	OFF	— TLM generates an audible alarm if armed	ON	ON	— Silent alarms become audible	<input type="checkbox"/> see table	<input type="checkbox"/> see table
Telephone Line Monitoring (TLM) Options																		
[1]	[2]																	
OFF	OFF	— TLM disabled ( <b>Default</b> )																
OFF	ON	— TLM generates a trouble if armed																
ON	OFF	— TLM generates an audible alarm if armed																
ON	ON	— Silent alarms become audible																
[2] <table border="1" data-bbox="233 659 732 814"></table>	<input type="checkbox"/> see table	<input type="checkbox"/> see table																
[3] <i>Reporting</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled																
[4] <i>Dialing Method</i>	<input type="checkbox"/> Pulse Dialing	<input type="checkbox"/> <b>Tone (DTMF) Dialing</b>																
[5] <i>Pulse Ratio</i>	<input type="checkbox"/> 1:2 (Europe)	<input type="checkbox"/> <b>1:1.5 (North America)</b>																
[6] <i>If armed, activate bell output on Com. Failure</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled																
[7] <i>Future Use</i>	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A																
[8] <i>Future Use</i>	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A																

## SECTION [136]: Dialer Options

Option	OFF	ON
[1] <i>Call Back</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[2] <i>Automatic Event Buffer Transmission</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[3] <i>Contact I.D. Report Codes</i>	<input type="checkbox"/> Programmable	<input type="checkbox"/> <b>All Codes (automatic)</b>
[4] <i>Alternate Dial</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[5] <i>If no dial tone is present</i>	<input type="checkbox"/> <b>Continue after 4 sec.</b>	<input type="checkbox"/> Hang-up after 16 sec.
[6] <i>Future Use</i>	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A
[7] <i>Future Use</i>	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A
[8] <i>Future Use</i>	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A

## SECTION [137]: Event Call Direction

Option	OFF	ON
[1] <i>Call Telephone #1 for Arming/Disarming Report Codes</i>	<input type="checkbox"/> Disabled	<input type="checkbox"/> <b>Enabled</b>
[2] <i>Call Telephone #2 for Arming/Disarming Report Codes</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[3] <i>Call Telephone #1 for Alarm/Restore Report Codes</i>	<input type="checkbox"/> Disabled	<input type="checkbox"/> <b>Enabled</b>
[4] <i>Call Telephone #2 for Alarm/Restore Report Codes</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[5] <i>Call Telephone #1 for Tamper/Restore Report Codes</i>	<input type="checkbox"/> Disabled	<input type="checkbox"/> <b>Enabled</b>
[6] <i>Call Telephone #2 for Tamper/Restore Report Codes</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[7] <i>Future Use</i>	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A
[8] <i>Future Use</i>	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A



## SECTION [138]: Event Call Direction

Option		OFF	ON
[1]	Call Telephone #1 for Trouble/Restore Report Codes	<input type="checkbox"/> Disabled	<input type="checkbox"/> <b>Enabled</b>
[2]	Call Telephone #2 for Trouble/Restore Report Codes	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[3]	Call Telephone #1 for Special Report Codes	<input type="checkbox"/> Disabled	<input type="checkbox"/> <b>Enabled</b>
[4]	Call Telephone #2 for Special Report Codes	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[5]	Future Use	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A
[6]	Future Use	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A
[7]	Future Use	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A
[8]	Future Use	<input type="checkbox"/> N/A	<input type="checkbox"/> N/A


## COMMUNICATION SETTINGS

### Section #

[140] \_\_\_/\_\_\_/\_\_\_  
TEL1 TEL2

### REPORTING FORMATS

- 1 = ADEMCO SLOW (1400HZ, 1900HZ, 10BPS)
- 2 = SILENT KNIGHT FAST (1400HZ, 1900HZ, 20BPS)
- 3 = SESCOA (2300HZ, 1800HZ, 20BPS)
- 4 = ADEMCO EXPRESS (DTMF 4+2)
- 5 = ADEMCO CONTACT ID (DEFAULT) ALSO, SEE OPTION [3] IN SECTION [136]
- 6 = PAGER FORMAT

 **If Hexadecimals (0 to FF) are used to program the report codes, verify that the pager also supports Hexadecimals. If the pager does not support Hexadecimals, use only the digits 0 to 9.**

[141] \_\_\_/\_\_\_/\_\_\_/\_\_\_ PANEL IDENTIFIER (WINLOAD SOFTWARE)

[142] \_\_\_/\_\_\_/\_\_\_/\_\_\_ PC PASSWORD (WINLOAD SOFTWARE)

**IMPORTANT NOTE:** To enter account numbers with less than four digits, use the [FORCE] key to enter blank digits.

[143] \_\_\_/\_\_\_/\_\_\_/\_\_\_ PARTITION ACCOUNT NUMBER 1

[144] \_\_\_/\_\_\_/\_\_\_/\_\_\_ PARTITION ACCOUNT NUMBER 2

[150] \_\_\_\_\_  
PC TELEPHONE NUMBER FOR WINLOAD SOFTWARE (32-DIGITS, if less than 32 press [ENTER] to accept)

[151] \_\_\_\_\_  
CENTRAL STATION TELEPHONE OR PAGER NUMBER 1 (32-DIGITS, if less than 32 press [ENTER] to accept)

[152] \_\_\_\_\_  
CENTRAL STATION TELEPHONE OR PAGER NUMBER 2 (32-DIGITS, if less than 32 press [ENTER] to accept)

[153] \_\_\_\_\_  
BACK UP TELEPHONE NUMBER (32-DIGITS, if less than 32 press [ENTER] to accept)

### Special Keys for Telephone Numbers

- [STAY] = \*
- [MEM] = Switch from pulse to tone dialing or vice versa
- [FORCE] = Delete current digit
- [BYP] = #
- [TBL] or [TRBL] = 4-second pause
- [PG] or [FNC1] = Inserts Blank Space

# REPORT CODES

Each section contains report codes for up to 4 events:

**Ademco Slow, Silent Knight, SESCOA, Ademco Express and Pager Formats:** Enter desired 1 or 2-digit hexa-value (0-F)

**Ademco "All Codes" Format:** The control panel automatically generates report codes from the "All Codes - Ademco Report Code List" on page 19.

**Ademco "Programmable" Format:** Enter desired 2-digit hexa values from the "Programmable - Ademco Report Code List" on page 18. Also Note that entering FF will set the report code to the default Ademco Report Code.

## ARMING REPORT CODES

[160]: \_\_/\_\_\_ Access code 1  
\_\_/\_\_\_ Access code 2  
\_\_/\_\_\_ Access code 3  
\_\_/\_\_\_ Access code 4

[165]: \_\_/\_\_\_ Access code 21  
\_\_/\_\_\_ Access code 22  
\_\_/\_\_\_ Access code 23  
\_\_/\_\_\_ Access code 24

[170]: \_\_/\_\_\_ Access code 41  
\_\_/\_\_\_ Access code 42  
\_\_/\_\_\_ Access code 43  
\_\_/\_\_\_ Access code 44

[161]: \_\_/\_\_\_ Access code 5  
\_\_/\_\_\_ Access code 6  
\_\_/\_\_\_ Access code 7  
\_\_/\_\_\_ Access code 8

[166]: \_\_/\_\_\_ Access code 25  
\_\_/\_\_\_ Access code 26  
\_\_/\_\_\_ Access code 27  
\_\_/\_\_\_ Access code 28

[171]: \_\_/\_\_\_ Access code 45  
\_\_/\_\_\_ Access code 46  
\_\_/\_\_\_ Access code 47  
\_\_/\_\_\_ Access code 48

[162]: \_\_/\_\_\_ Access code 9  
\_\_/\_\_\_ Access code 10  
\_\_/\_\_\_ Access code 11  
\_\_/\_\_\_ Access code 12

[167]: \_\_/\_\_\_ Access code 29  
\_\_/\_\_\_ Access code 30  
\_\_/\_\_\_ Access code 31  
\_\_/\_\_\_ Access code 32

### SPECIAL ARMING CODES

[172]: \_\_/\_\_\_ Auto-Arming  
\_\_/\_\_\_ Late to close  
\_\_/\_\_\_ No Movement  
\_\_/\_\_\_ Partial Arming

[163]: \_\_/\_\_\_ Access code 13  
\_\_/\_\_\_ Access code 14  
\_\_/\_\_\_ Access code 15  
\_\_/\_\_\_ Access code 16

[168]: \_\_/\_\_\_ Access code 33  
\_\_/\_\_\_ Access code 34  
\_\_/\_\_\_ Access code 35  
\_\_/\_\_\_ Access code 36

[173]: \_\_/\_\_\_ Quick Arming  
\_\_/\_\_\_ Arming via PC  
\_\_/\_\_\_ Keyswitch Arming  
\_\_/\_\_\_ N/A

[164]: \_\_/\_\_\_ Access code 17  
\_\_/\_\_\_ Access code 18  
\_\_/\_\_\_ Access code 19  
\_\_/\_\_\_ Access code 20

[169]: \_\_/\_\_\_ Access code 37  
\_\_/\_\_\_ Access code 38  
\_\_/\_\_\_ Access code 39  
\_\_/\_\_\_ Access code 40

## DISARMING REPORT CODES

[174]: \_\_/\_\_\_ Access code 1  
\_\_/\_\_\_ Access code 2  
\_\_/\_\_\_ Access code 3  
\_\_/\_\_\_ Access code 4

[179]: \_\_/\_\_\_ Access code 21  
\_\_/\_\_\_ Access code 22  
\_\_/\_\_\_ Access code 23  
\_\_/\_\_\_ Access code 24

[184]: \_\_/\_\_\_ Access code 41  
\_\_/\_\_\_ Access code 42  
\_\_/\_\_\_ Access code 43  
\_\_/\_\_\_ Access code 44

[175]: \_\_/\_\_\_ Access code 5  
\_\_/\_\_\_ Access code 6  
\_\_/\_\_\_ Access code 7  
\_\_/\_\_\_ Access code 8

[180]: \_\_/\_\_\_ Access code 25  
\_\_/\_\_\_ Access code 26  
\_\_/\_\_\_ Access code 27  
\_\_/\_\_\_ Access code 28

[185]: \_\_/\_\_\_ Access code 45  
\_\_/\_\_\_ Access code 46  
\_\_/\_\_\_ Access code 47  
\_\_/\_\_\_ Access code 48

[176]: \_\_/\_\_\_ Access code 9  
\_\_/\_\_\_ Access code 10  
\_\_/\_\_\_ Access code 11  
\_\_/\_\_\_ Access code 12

[181]: \_\_/\_\_\_ Access code 29  
\_\_/\_\_\_ Access code 30  
\_\_/\_\_\_ Access code 31  
\_\_/\_\_\_ Access code 32

### SPECIAL DISARMING CODES

[186]: \_\_/\_\_\_ Cancel Auto-Arm  
\_\_/\_\_\_ Disarming via PC  
\_\_/\_\_\_ Keyswitch Disarm  
\_\_/\_\_\_ N/A

[177]: \_\_/\_\_\_ Access code 13  
\_\_/\_\_\_ Access code 14  
\_\_/\_\_\_ Access code 15  
\_\_/\_\_\_ Access code 16

[182]: \_\_/\_\_\_ Access code 33  
\_\_/\_\_\_ Access code 34  
\_\_/\_\_\_ Access code 35  
\_\_/\_\_\_ Access code 36

[178]: \_\_/\_\_\_ Access code 17  
\_\_/\_\_\_ Access code 18  
\_\_/\_\_\_ Access code 19  
\_\_/\_\_\_ Access code 20

[183]: \_\_/\_\_\_ Access code 37  
\_\_/\_\_\_ Access code 38  
\_\_/\_\_\_ Access code 39  
\_\_/\_\_\_ Access code 40

## ALARM REPORT CODES

### ALARM

[187]: \_\_/\_\_/\_\_ Zone 1  
\_\_/\_\_/\_\_ Zone 2  
\_\_/\_\_/\_\_ Zone 3  
\_\_/\_\_/\_\_ Zone 4

[188]: \_\_/\_\_/\_\_ Zone 5  
\_\_/\_\_/\_\_ Zone 6  
\_\_/\_\_/\_\_ Zone 7  
\_\_/\_\_/\_\_ Zone 8

[189]: \_\_/\_\_/\_\_ Zone 9  
\_\_/\_\_/\_\_ Zone 10  
\_\_/\_\_/\_\_ Zone 11  
\_\_/\_\_/\_\_ Zone 12

[190]: \_\_/\_\_/\_\_ Zone 13  
\_\_/\_\_/\_\_ Zone 14  
\_\_/\_\_/\_\_ Zone 15  
\_\_/\_\_/\_\_ Zone 16

### RESTORE

[191]: \_\_/\_\_/\_\_ Zone 1  
\_\_/\_\_/\_\_ Zone 2  
\_\_/\_\_/\_\_ Zone 3  
\_\_/\_\_/\_\_ Zone 4

[192]: \_\_/\_\_/\_\_ Zone 5  
\_\_/\_\_/\_\_ Zone 6  
\_\_/\_\_/\_\_ Zone 7  
\_\_/\_\_/\_\_ Zone 8

[193]: \_\_/\_\_/\_\_ Zone 9  
\_\_/\_\_/\_\_ Zone 10  
\_\_/\_\_/\_\_ Zone 11  
\_\_/\_\_/\_\_ Zone 12

[194]: \_\_/\_\_/\_\_ Zone 13  
\_\_/\_\_/\_\_ Zone 14  
\_\_/\_\_/\_\_ Zone 15  
\_\_/\_\_/\_\_ Zone 16

### SPECIAL

[195]: \_\_/\_\_/\_\_ Emergency Panic  
\_\_/\_\_/\_\_ Auxiliary Panic  
\_\_/\_\_/\_\_ Fire Panic  
\_\_/\_\_/\_\_ Recent Closing

[196]: \_\_/\_\_/\_\_ Zone Shutdown  
\_\_/\_\_/\_\_ Duress  
\_\_/\_\_/\_\_ N/A  
\_\_/\_\_/\_\_ N/A

## TAMPER REPORT CODES

### TROUBLE

[197]: \_\_/\_\_/\_\_ Zone 1  
\_\_/\_\_/\_\_ Zone 2  
\_\_/\_\_/\_\_ Zone 3  
\_\_/\_\_/\_\_ Zone 4

[198]: \_\_/\_\_/\_\_ Zone 5  
\_\_/\_\_/\_\_ Zone 6  
\_\_/\_\_/\_\_ Zone 7  
\_\_/\_\_/\_\_ Zone 8

[199]: \_\_/\_\_/\_\_ Zone 9  
\_\_/\_\_/\_\_ Zone 10  
\_\_/\_\_/\_\_ Zone 11  
\_\_/\_\_/\_\_ Zone 12

[200]: \_\_/\_\_/\_\_ Zone 13  
\_\_/\_\_/\_\_ Zone 14  
\_\_/\_\_/\_\_ Zone 15  
\_\_/\_\_/\_\_ Zone 16

### RESTORE

[201]: \_\_/\_\_/\_\_ Zone 1  
\_\_/\_\_/\_\_ Zone 2  
\_\_/\_\_/\_\_ Zone 3  
\_\_/\_\_/\_\_ Zone 4

[202]: \_\_/\_\_/\_\_ Zone 5  
\_\_/\_\_/\_\_ Zone 6  
\_\_/\_\_/\_\_ Zone 7  
\_\_/\_\_/\_\_ Zone 8

[203]: \_\_/\_\_/\_\_ Zone 9  
\_\_/\_\_/\_\_ Zone 10  
\_\_/\_\_/\_\_ Zone 11  
\_\_/\_\_/\_\_ Zone 12

[204]: \_\_/\_\_/\_\_ Zone 13  
\_\_/\_\_/\_\_ Zone 14  
\_\_/\_\_/\_\_ Zone 15  
\_\_/\_\_/\_\_ Zone 16

## SYSTEM TROUBLE REPORT CODES

### SYSTEM TROUBLE

[205]: \_\_/\_\_/\_\_ N/A  
\_\_/\_\_/\_\_ AC Failure  
\_\_/\_\_/\_\_ Battery Failure  
\_\_/\_\_/\_\_ Auxiliary Supply

[206]: \_\_/\_\_/\_\_ Bell Output Overload  
\_\_/\_\_/\_\_ Bell Output Disconnect  
\_\_/\_\_/\_\_ Timer Loss  
\_\_/\_\_/\_\_ Fire Loop Trbl

[207]: \_\_/\_\_/\_\_ Wireless Low Battery  
\_\_/\_\_/\_\_ Module Fault  
\_\_/\_\_/\_\_ Printer Fault  
\_\_/\_\_/\_\_ Fail to Communicate

### RESTORE

[208]: \_\_/\_\_/\_\_ TLM  
\_\_/\_\_/\_\_ AC Failure  
\_\_/\_\_/\_\_ Battery Failure  
\_\_/\_\_/\_\_ Auxiliary Supply

[209]: \_\_/\_\_/\_\_ Bell Output Overload  
\_\_/\_\_/\_\_ Bell Output Disconnect  
\_\_/\_\_/\_\_ Timer Programmed  
\_\_/\_\_/\_\_ Fire Loop Trbl

[210]: \_\_/\_\_/\_\_ Wireless Low Battery  
\_\_/\_\_/\_\_ Module Fault  
\_\_/\_\_/\_\_ Printer Fault  
\_\_/\_\_/\_\_ N/A

### SPECIAL

[211]: \_\_/\_\_/\_\_ Cold Start (Shutdown)  
\_\_/\_\_/\_\_ Test Report  
\_\_/\_\_/\_\_ PC Call Back  
\_\_/\_\_/\_\_ PC Access

[212]: \_\_/\_\_/\_\_ Installer In  
\_\_/\_\_/\_\_ Installer Out  
\_\_/\_\_/\_\_ N/A  
\_\_/\_\_/\_\_ N/A

[213]: \_\_/\_\_/\_\_ TX Supervision Loss  
\_\_/\_\_/\_\_ TX Supervision Restore  
\_\_/\_\_/\_\_ N/A  
\_\_/\_\_/\_\_ N/A

# PROGRAMMABLE - ADEMCO CONTACT ID REPORT CODE LIST

If using the Ademco Contact ID Programmable code format, enter the 2-digit hexadecimal value from the table below (**Prog. Value**) into sections [160] to [213] to program the desired report codes. **To enter a 0 value press the [FORCE] key.**

CID#	Reporting Code	Prog. Value	CID#	Reporting Code	Prog. Value	CID#	Reporting Code	Prog. Value
<b>MEDICAL ALARMS - 100</b>			204	Low Water Level	2F	403	Automatic O/C	5D
100	Medical Alarm	01	205	Pump Activated	30	404	Late to O/C	5E
101	Pendant Transmitter	02	206	Pump Failure	31	405	Deferred	5F
102	Fail to Report In	03	<b>SYSTEM TROUBLES - 300 &amp; 310</b>			406	Cancel	60
<b>FIRE ALARMS - 110</b>			300	System Trouble	32	407	Remote Arm/Disarm	61
110	Fire Alarm	04	301	AC Loss	33	408	Quick Arm	62
111	Smoke	05	302	Low System Battery	34	409	Keypad O/C	63
112	Combustion	06	303	RAM Checksum Bad	35	<b>REMOTE ACCESS - 410</b>		
113	Water Flow	07	304	ROM Checksum Bad	36	411	Callback Request Made	64
114	Heat	08	305	System Reset	37	412	Success - Download Access	65
115	Pull Station	09	306	Panel Program Changed	38	413	Unsuccessful Access	66
116	Duct	0A	307	Self-Test Failure	39	414	System Shutdown	67
117	Flame	0B	308	System Shutdown	3A	415	Dialer Shutdown	68
118	Near Alarm	0C	309	Battery Test Failure	3B	<b>ACCESS CONTROL - 420</b>		
<b>PANIC ALARMS - 120</b>			310	Ground Fault	3C	421	Access Denied	69
120	Panic Alarm	0D	<b>SOUNDER/RELAY TROUBLES - 320</b>			422	Access Report By User	6A
121	Duress	0E	320	Sounder Relay	3D	<b>SYSTEM DISABLES - 500 &amp; 510</b>		
122	Silent	0F	321	Bell 1	3E	<b>SOUNDER RELAY DISABLES - 520</b>		
123	Audible	10	322	Bell 2	3F	520	Sounder/Relay Disabled	6B
<b>BURGLAR ALARMS - 130</b>			323	Alarm Relay	40	521	Bell 1 Disable	6C
130	Burglary	11	324	Trouble Relay	41	522	Bell 2 Disable	6D
131	Perimeter	12	325	Reversing	42	523	Alarm Relay Disable	6E
132	Interior	13	<b>SYSTEM PERIPHERAL TROUBLES - 330 &amp; 340</b>			524	Trouble Relay Disable	6F
133	24-Hour	14	330	System Peripheral	43	525	Reversing Relay Disable	70
134	Entry/Exit	15	331	Polling Loop Open	44	<b>SYSTEM PERIPHERAL DISABLES - 530 &amp; 540</b>		
135	Day/Night	16	332	Polling Loop Short	45	<b>COMMUNICATION DISABLES - 550 &amp; 560</b>		
136	Outdoor	17	333	Exp. Module Failure	46	551	Dialer Disabled	71
137	Tamper	18	334	Repeater Failure	47	552	Radio xmitter Disabled	72
138	Near Alarm	19	335	Local Printer Paper Out	48	<b>BYPASSES - 570</b>		
<b>GENERAL ALARMS - 140</b>			336	Local Printer Failure	49	570	Zone Bypass	73
140	General Alarm	1A	<b>COMMUNICATION TROUBLES - 350 &amp; 360</b>			571	Fire Bypass	74
141	Polling Loop Open	1B	350	Communication	4A	572	24-Hour Zone Bypass	75
142	Polling Loop Short	1C	351	Telco Fault 1	4B	573	Burg. Bypass	76
143	Expansion Module Failure	1D	352	Telco Fault 2	4C	574	Group Bypass	77
144	Sensor Tamper	1E	353	Long Range Radio	4D	<b>TEST/MISC. - 600</b>		
145	Expansion Module Tamper	1F	354	Fail to Communicate	4E	601	Manual Trigger Test	78
<b>24-HOUR NON-BURGLARY - 150 &amp; 160</b>			355	Loss of Radio Supervision	4F	602	Periodic Test Report	79
150	24-Hour Non-Burglary	20	356	Loss of Central Polling	50	603	Periodic RF Xmission	7A
151	Gas Detected	21	<b>PROTECTION LOOP TROUBLES - 370</b>			604	Fire Test	7B
152	Refrigeration	22	370	Protection Loop	51	605	Status Report to Follow	7C
153	Loss of Heat	23	371	Protection Loop Open	52	606	Listen-in to Follow	7D
154	Water Leakage	24	372	Protection Loop short	53	607	Walk Test Mode	7E
155	Foil Break	25	373	Fire Trouble	54	621	Event Log Reset	7F
156	Day Trouble	26	<b>SENSOR TROUBLES - 380</b>			622	Event Log 50% Full	80
157	Low Bottled Gas Level	27	380	Sensor Trouble	55	623	Event Log 90% Full	81
158	High Temp	28	381	Loss of Super. -RF	56	624	Event Log Overflow	82
159	Low Temp	29	382	Loss of Super. - RPM	57	625	Time/Date Reset	83
161	Loss of Air Flow	2A	383	Sensor Tamper	58	626	Time/Date Inaccurate	84
<b>FIRE SUPERVISORY - 200 &amp; 210</b>			384	RF xmtr. Low Battery	59	627	Program Mode Entry	85
200	Fire Supervisory	2B	<b>OPEN/CLOSE - 400</b>			628	Program Mode Exit	86
201	Low Water Pressure	2C	400	Open/Close	5A	631	Exception Schedule Change	87
202	Low CO2	2D	401	O/C by User	5B			
203	Gate Valve Sensor	2E	402	Group O/C	5C			

## ALL CODES - ADEMCO CONTACT ID REPORT CODE LIST

<b>System Event</b>	<b>Default Contact ID Report Code</b> <i>when option [3] is on in section [136]</i>
Arming with Master Code (##)	3 4A1 - Close by user
Arming with User Code (##)	3 4A1 - Close by user
Arming with Keyswitch (##)	3 4A9 - Keyswitch Close
Auto Arming	3 4A3 - Automatic Close
Arm with PC software	3 4A7 - Remote arm/disarm
Late To Close	3 4A4 - Late to Close
No Movement	3 4A4 - Late to Close
Partial arming	1 574 - Group bypass
Quick arming	3 408 - Quick arm
Disarm with Master Code (##)	1 4A1 - Open by user
Disarm with User Code (##)	1 4A1 - Open by user
Disarm with Keyswitch (##)	1 4A9 - Keyswitch Open
Disarm after alarm with Master Code (##)	1 4A1 - Open by user
Disarm after alarm with User Code (##)	1 4A1 - Open by user
Disarm after alarm with Keyswitch (##)	1 4A9 - Keyswitch Open
Auto Arming Cancellation	1 4A5 - Deferred Open/Close
Disarm with PC software	1 4A7 - Remote arm/disarm
Disarm after an alarm with PC software	1 4A7 - Remote arm/disarm
Zone Bypassed (##)	1 57A - Zone bypass
Zone alarm (##)	1 13A - Burglary Alarm
Fire alarm (##)	1 11A - Fire alarm
Zone alarm restore (##)	3 13A - Burglary Alarm Restore
Fire alarm restore (##)	3 11A - Fire alarm Restore
Panic 1 - Emergency	1 12A - Panic alarm
Panic 2 - Medical	1 1AA - Medical alarm
Panic 3 - Fire	1 115 - Pull Station
Recent closing	3 4AA - Open/Close
Global zone shutdown	1 574 - Group bypass
Duress alarm	1 121 - Duress
Zone shutdown (##)	1 57A - Zone bypass
Zone tampered (##)	1 144 - Sensor tamper
Zone tamper restore (##)	3 144 - Sensor tamper restore
AC Failure	1 3A1 - AC loss
Battery Failure	1 3A9 - Battery test failure
Auxiliary supply trouble	1 3AA - System trouble
Bell output current limit	1 321 - Bell 1
Bell absent	1 321 - Bell 1

System Event	Default Contact ID Report Code <i>when option [3] is on in section [136]</i>
Clock lost	1 626 - Time/Date inaccurate
Fire loop trouble	1 373 - Fire trouble
Wireless Transmitter Low Battery	1 384 - RF xmtr. low battery
Wireless Transmitter Supervision Loss	1 381 - Loss of super. - RF
Module fault	1 333 - Expansion module failure
Printer fault	1 336 - Local printer failure
Fail to communicate with central station	1 354 - Fail to communicate
TLM trouble restore	3 351 - Telco 1 fault restore
AC Failure restore	3 3A1 - AC loss restore
Battery Failure restore	3 3A9 - Battery test restore
Auxiliary supply trouble restore	3 3AA - System trouble restore
Bell output current limit restore	3 321 - Bell 1 restore
Bell absent restore	3 321 - Bell 1 restore
Clock programmed	3 626 - Time/Date Reset
Fire loop trouble restore	3 373 - Fire trouble restore
Wireless Transmitter Low Battery	3 384 - RF xmtr. low battery
Wireless Transmitter Supervision Loss	3 381 - Loss of super. - RF
Module fault restore	3 333 - Expansion module failure restore
Printer fault restore	3 336 - Local printer failure restore
Fail to communicate with central station	3 354 - Fail to communicate restore
Cold Start	1 3A8 - System shutdown
Test Report engaged	1 6A2 - Periodic test report
PC software communication finished	1 412 - Successful - download access
Installer on site	1 627 - Program mode Entry
Installer programming finished	1 628 - Program mode Exit

## SYSTEM SETTINGS

Section #	Description
[280] __/__:__/_	SYSTEM REAL TIME CLOCK (HH:MM)
[281] ____/____/____	INSTALLER CODE <b>Default: 000000</b>
[282] __/____	INSTALLER CODE LOCK <b>Default: 000</b> (147 to lock, 000 to unlock)

**IMPORTANT NOTE:** If the Access Code Length is changed from four digits to six digits when access codes have already been programmed, the control panel will automatically add the last 2 digits by using the first 2 digits. For example, if the access code is 1234 and you switch to 6 digits, the code will become 123412. Be sure to verify the access codes after switching from 4-digit access codes to 6-digit codes. When switching from six digits to four digits, the control panel will simply remove the final two digits of the access code. For example, 123456 will become 1234.

# USER CODE OPTIONS

**[301]**      /  /  /  /  /      SYSTEM MASTER CODE (see note on preceding page) **Default: 123456**

<p><b>[1]</b> on = Partition 1 Access</p> <p><b>[2]</b> on = Partition 2 Access</p> <p><b>[3]</b> on = Bypass Programming</p> <p><b>[4]</b> on = Stay Arming</p>	<p><b>[5]</b> on = Force Arming</p> <p><b>[6]</b> on = Arm Only</p> <p><b>[7]</b> on = PGM Activation Only</p> <p><b>[8]</b> on = Not Used</p>
<p><i>off = Option Disabled</i></p>	

Section #	User Code Options (on/off)	Section #	User Code Options (on/off)
Default:	1    3   4	Default:	1    3   4
<b>[302]</b> Master Code 1	1 2 3 4 5 6 7 8	<b>[325]</b> User Code 025	1 2 3 4 5 6 7 8
<b>[303]</b> Master Code 2	1 2 3 4 5 6 7 8	<b>[326]</b> User Code 026	1 2 3 4 5 6 7 8
<b>[304]</b> User Code 004	1 2 3 4 5 6 7 8	<b>[327]</b> User Code 027	1 2 3 4 5 6 7 8
<b>[305]</b> User Code 005	1 2 3 4 5 6 7 8	<b>[328]</b> User Code 028	1 2 3 4 5 6 7 8
<b>[306]</b> User Code 006	1 2 3 4 5 6 7 8	<b>[329]</b> User Code 029	1 2 3 4 5 6 7 8
<b>[307]</b> User Code 007	1 2 3 4 5 6 7 8	<b>[330]</b> User Code 030	1 2 3 4 5 6 7 8
<b>[308]</b> User Code 008	1 2 3 4 5 6 7 8	<b>[331]</b> User Code 031	1 2 3 4 5 6 7 8
<b>[309]</b> User Code 009	1 2 3 4 5 6 7 8	<b>[332]</b> User Code 032	1 2 3 4 5 6 7 8
<b>[310]</b> User Code 010	1 2 3 4 5 6 7 8	<b>[333]</b> User Code 033	1 2 3 4 5 6 7 8
<b>[311]</b> User Code 011	1 2 3 4 5 6 7 8	<b>[334]</b> User Code 034	1 2 3 4 5 6 7 8
<b>[312]</b> User Code 012	1 2 3 4 5 6 7 8	<b>[335]</b> User Code 035	1 2 3 4 5 6 7 8
<b>[313]</b> User Code 013	1 2 3 4 5 6 7 8	<b>[336]</b> User Code 036	1 2 3 4 5 6 7 8
<b>[314]</b> User Code 014	1 2 3 4 5 6 7 8	<b>[337]</b> User Code 037	1 2 3 4 5 6 7 8
<b>[315]</b> User Code 015	1 2 3 4 5 6 7 8	<b>[338]</b> User Code 038	1 2 3 4 5 6 7 8
<b>[316]</b> User Code 016	1 2 3 4 5 6 7 8	<b>[339]</b> User Code 039	1 2 3 4 5 6 7 8
<b>[317]</b> User Code 017	1 2 3 4 5 6 7 8	<b>[340]</b> User Code 040	1 2 3 4 5 6 7 8
<b>[318]</b> User Code 018	1 2 3 4 5 6 7 8	<b>[341]</b> User Code 041	1 2 3 4 5 6 7 8
<b>[319]</b> User Code 019	1 2 3 4 5 6 7 8	<b>[342]</b> User Code 042	1 2 3 4 5 6 7 8
<b>[320]</b> User Code 020	1 2 3 4 5 6 7 8	<b>[343]</b> User Code 043	1 2 3 4 5 6 7 8
<b>[321]</b> User Code 021	1 2 3 4 5 6 7 8	<b>[344]</b> User Code 044	1 2 3 4 5 6 7 8
<b>[322]</b> User Code 022	1 2 3 4 5 6 7 8	<b>[345]</b> User Code 045	1 2 3 4 5 6 7 8
<b>[323]</b> User Code 023	1 2 3 4 5 6 7 8	<b>[346]</b> User Code 046	1 2 3 4 5 6 7 8
<b>[324]</b> User Code 024	1 2 3 4 5 6 7 8	<b>[347]</b> User Code 047	1 2 3 4 5 6 7 8
		<b>[348]</b> User Code 048	1 2 3 4 5 6 7 8

# LIBERATOR WIRELESS BUS MODULE (SPC-319)

The following options and features are only available to program when a **Liberator Wireless Bus Module** has been connected to the Spectra control panel's communication bus as shown on page 37. The Liberator Wireless Bus Module (SPC-319) allows you to add up to eight fully programmable remote controls and up to eight Liberator Wireless Detectors and Contact Switches (door contacts). The SPC-319 also provides one programmable 5A relay (PGM). A second 5A programmable relay (PGM) is available as an option.



**The Liberator Wireless Bus Module does not function with the Spectra 1758 and 1758EX control panels. Do not connect more than one Liberator Module.**

## WIRELESS TRANSMITTER ASSIGNMENT (Liberator Only)

The serial number can be located on the inside of the transmitter or you can use the *Serial Number Display* (see page 23). Use the Liberator Wireless Motion Detectors (Model# 9002) and the Liberator Contact Switches (Model# 9020).

Section #	Serial #	NO ATZ	WITH ATZ
[601]	___/___/___/___/___/___/___/___ EXPANSION INPUT 1=	Zone 8	Zone 13
[602]	___/___/___/___/___/___/___/___ EXPANSION INPUT 2=	Zone 9	Zone 14
[603]	___/___/___/___/___/___/___/___ EXPANSION INPUT 3=	Zone 10	Zone 15
[604]	___/___/___/___/___/___/___/___ EXPANSION INPUT 4=	Zone 11	Zone 16
[605]	___/___/___/___/___/___/___/___ EXPANSION INPUT 5=	Zone 12	N/A
[606]	___/___/___/___/___/___/___/___ EXPANSION INPUT 6=	Zone 13	N/A
[607]	___/___/___/___/___/___/___/___ EXPANSION INPUT 7=	Zone 14	N/A
[608]	___/___/___/___/___/___/___/___ EXPANSION INPUT 8=	Zone 15	N/A

### WARNING!

Avoid assigning devices from different modules to the same Expansion Input. For example, do not assign a wireless transmitter to section [601], then connect a detection device to input 1 of a hardwire module and enable option [1] in section [651]. This would mean both devices have been assigned to the same Expansion Input.

## WIRELESS MODULE OPTIONS (Liberator Only)

**Bold = Default Setting**


### SECTION [610]: General Options

Option	OFF	ON
[1] <i>Wireless Transmitter Supervision</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[2] <i>Supervision Timer Setting (must be same as the transmitter's jumper setting)</i>	<input type="checkbox"/> <b>Low = Every 12 hours</b>	<input type="checkbox"/> High = Every 12 minutes
[3] <i>PGM1 on Liberator follows Global PGM programmed in sections [124] &amp; [125]</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[4] <i>PGM2 on Liberator follows Global PGM programmed in sections [124] &amp; [125]</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[5] <i>Future Use</i>	<input type="checkbox"/> <b>N/A</b>	<input type="checkbox"/> N/A
[6] <i>Future Use</i>	<input type="checkbox"/> <b>N/A</b>	<input type="checkbox"/> N/A
[7] <i>Future Use</i>	<input type="checkbox"/> <b>N/A</b>	<input type="checkbox"/> N/A
[8] <i>Future Use</i>	<input type="checkbox"/> <b>N/A</b>	<input type="checkbox"/> N/A



Section #	Decimal Value (000-255)	Description	Default Value
[615]	___/___/___ (001-008 = expansion inputs 1-8)	ZONE ASSIGNMENT FOR ON-BOARD TAMPER	000
[616]	___/___/___ seconds (000 = follow stop event)	PGM1 TIMER(LIBERATOR)	5 sec.
[617]	___/___/___ seconds (000 = follow stop event)	PGM2 TIMER (LIBERATOR)	5 sec.

## PGM PROGRAMMING (Liberator Only)

 **The system will ignore sections [620] and [621] if PGM1 has been programmed to follow the Global PGM. The system will ignore sections [622] and [623] if PGM2 has been programmed to follow the Global PGM. Refer to options [3] and [4] in section [610] on page 22.**

Section #	Event Group #	Sub-Group #	Partition #
[620] = PGM1 Start Event	___/___	___/___	___/___
[621] = PGM1 Stop Event <i>Can be used as another Start Event if section [616] is greater than 000.</i>	___/___	___/___	___/___
[622] = PGM2 Start Event	___/___	___/___	___/___
[623] = PGM2 Stop Event <i>Can be used as another Start Event if section [617] is greater than 000.</i>	___/___	___/___	___/___

Event Group #	Sub-Group #	Partition #
<b>40 = Wireless Zone Opened</b> <b>41 = Wireless Zone Closed</b> <b>42 = Wireless Tamper Opened</b> <b>43 = Wireless Tamper Closed</b> <b>44 = Wireless Zone - Low Battery</b> <b>45 = Wireless Zone -Battery Restore</b> <b>46 = Wireless Zone - Supervision Failure</b> <b>47 = Wireless Zone - Supervision Restore</b>	01 = Expansion Input 1 - Section [601] 02 = Expansion Input 2 - Section [602] 03 = Expansion Input 3 - Section [603] 04 = Expansion Input 4 - Section [604] 05 = Expansion Input 5 - Section [605] 06 = Expansion Input 6 - Section [606] 07 = Expansion Input 7 - Section [607] 08 = Expansion Input 8 - Section [608] 99 = Any transmitter	Not used; enter 00
<b>48 = Remote Control Button Pressed</b>	01 = Remote Control #1 - Section [721]/[731] 02 = Remote Control #2 - Section [722]/[732] 03 = Remote Control #3 - Section [723]/[733] 04 = Remote Control #4 - Section [724]/[734] 05 = Remote Control #5 - Section [725]/[735] 06 = Remote Control #6 - Section [726]/[736] 07 = Remote Control #7 - Section [727]/[737] 08 = Remote Control #8 - Section [728]/[738] 99 = Any remote control	01 = Button A 02 = Button B 03 = Button C 04 = Button D 05 = Button A & B 06 = Button C & D 07 = Button A & C 08 = Button B & D
<b>49 = On-board tamper (receiver)</b>	01 = Tamper Open 02 = Tamper Closed 99 = Tamper opened or closed	Not used; enter 00

## SERIAL NUMBER DISPLAY

- [630] STEP 1: Enter section [630]  
 STEP 2: Press the tamper switch of the desired wireless transmitter or press any two buttons on the desired remote control. The keypad will emit a confirmation beep.  
 STEP 3: On LED keypads the digits will appear one at a time by illuminating the corresponding light. To view the next digit press the [ENTER] key. On LCD keypads the entire serial number will appear on the screen.  
 STEP 4: Return to STEP 2 to continue or press [CLEAR] to exit the *Serial Number Display*.

## SIGNAL STRENGTH DISPLAY

Enter the section corresponding to the desired Expansion Input, then activate the transmitter by opening/closing the zone or by pressing the tamper switch. NOTE: after entering the section, ignore the first reading as it won't be accurate. **LED Keypad:** Lights numbered from one to eight will illuminate. An average reading of 3 and up is acceptable. **LCD Keypad:** One to eight characters will appear on the screen. An average reading of 3 characters and up is acceptable.

Section #	Description
[631]	Display Signal Strength of Expansion Input 1 - Section [601]
[632]	Display Signal Strength of Expansion Input 2 - Section [602]
[633]	Display Signal Strength of Expansion Input 3 - Section [603]
[634]	Display Signal Strength of Expansion Input 4 - Section [604]
[635]	Display Signal Strength of Expansion Input 5 - Section [605]
[636]	Display Signal Strength of Expansion Input 6 - Section [606]
[637]	Display Signal Strength of Expansion Input 7 - Section [607]
[638]	Display Signal Strength of Expansion Input 8 - Section [608]

## LIBERATOR MODULE (SPC-319) RESET

[640] PRESS [ENTER] TO CONFIRM. WILL RESET THE LIBERATOR MODULE'S SECTIONS [601] TO [624] TO DEFAULT VALUES.

# ZONE EXPANSION MODULES (SPC-ZX4/8)

The following options and features are only available to program when a **Zone Expansion Bus Module** has been connected to the Spectra control panel's communication bus as shown on page 37. The Zone Expansion Modules provide you with up to 4 (SPC-ZX4) or up to eight (SPC-ZX8) additional hardwired inputs and one normally open 50mA PGM output (on SPC-ZX8 only).



**Do not connect more than one Zone Expansion Module.**

**Bold = Default Setting**

## SECTION [650]: Options

Option		OFF	ON
[1]	<i>EOL (end-of-line) Resistors for hardwire modules</i>	<input type="checkbox"/> <b>No EOL</b>	<input type="checkbox"/> Use EOL Resistors
[2]	<i>Zone Expansion Module Tamper Recognition</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Z1 becomes tamper input
[3]	<i>PGM1 on SPC-ZX8 Module follows Global PGM programmed in sections [124] &amp; [125]</i>	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Enabled
[4]	<i>Future Use</i>	<input type="checkbox"/> <b>N/A</b>	<input type="checkbox"/> N/A
[5]	<i>Future Use</i>	<input type="checkbox"/> <b>N/A</b>	<input type="checkbox"/> N/A
[6]	<i>Future Use</i>	<input type="checkbox"/> <b>N/A</b>	<input type="checkbox"/> N/A
[7]	<i>Future Use</i>	<input type="checkbox"/> <b>N/A</b>	<input type="checkbox"/> N/A
[8]	<i>Future Use</i>	<input type="checkbox"/> <b>N/A</b>	<input type="checkbox"/> N/A

## SECTION [651]: Zone Assignment

Option	OFF	ON	NO ATZ	WITH ATZ
[1]	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Z1 = <i>Expan. Input 1 =</i>	Zone 8	Zone 13
[2]	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Z2 = <i>Expan. Input 2 =</i>	Zone 9	Zone 14
[3]	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Z3 = <i>Expan. Input 3 =</i>	Zone 10	Zone 15
[4]	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Z4 = <i>Expan. Input 4 =</i>	Zone 11	Zone 16
[5]	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Z5 = <i>Expan. Input 5 =</i>	Zone 12	N/A
[6]	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Z6 = <i>Expan. Input 6 =</i>	Zone 13	N/A
[7]	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Z7 = <i>Expan. Input 7 =</i>	Zone 14	N/A
[8]	<input type="checkbox"/> <b>Disabled</b>	<input type="checkbox"/> Z8 = <i>Expan. Input 8 =</i>	Zone 15	N/A

### WARNING!

Avoid assigning devices from different modules to the same Expansion Input. For example, do not assign a wireless transmitter to section [601], then connect a detection device to Z1 of a hardwire module and enable option [1] in section [651]. This would mean both devices have been assigned to the same Expansion Input.

## PGM TIMER (Zone Module SPC-ZX8 Only)

[655]    \_\_\_/\_\_\_/\_\_\_seconds (000 = follow stop event)    PGM1 TIMER (HARDWIRE)    5 sec. (default)

## PGM PROGRAMMING (Zone Module SPC-ZX8 Only)



*The system will ignore sections [656] and [657] if PGM1 has been programmed to follow the Global PGM. Refer to option [3] in section [650] on page 25.*

Section #	Event Group #	Sub-Group #	Partition #
[656] = PGM1 Start Event	___/___	___/___	___/___
[657] = PGM1 Stop Event <i>Can be used as another Start Event if section [655] is greater than 000.</i>	___/___	___/___	___/___

Event Group #	Sub-Group #	Partition #
<b>60 = Hardwire Zone Opened</b>	01 = Expansion Input 1 - Section [651] - [1]	Not used; enter 00
<b>61 = Hardwire Zone Closed</b>	02 = Expansion Input 2 - Section [651] - [2]	
<b>62 = Hardwire Tamper Opened</b>	03 = Expansion Input 3 - Section [651] - [3]	
<b>63 = Hardwire Tamper Closed</b>	04 = Expansion Input 4 - Section [651] - [4]	
	05 = Expansion Input 5 - Section [651] - [5]	
	06 = Expansion Input 6 - Section [651] - [6]	
	07 = Expansion Input 7 - Section [651] - [7]	
	08 = Expansion Input 8 - Section [651] - [8]	
	99 = Any zone input	



*The PGM will only activate or deactivate 100mS after any of the above events have occurred (if programmed).*

## RESET ZONE EXPANSION MODULE

**[660]**      PRESS [ENTER] TO CONFIRM. WILL RESET THE ZONE MODULE'S SECTIONS [650] TO [657] TO DEFAULT VALUES.


# REMOTE CONTROL PROGRAMMING

## USER ASSIGNMENT

Section #	Decimal Value	Description	Default Value
[701]	___/___/___ (001-048 = USER #)	REMOTE CONTROL #1 - SECTION [721]/[731]	000
[702]	___/___/___ (001-048 = USER #)	REMOTE CONTROL #2 - SECTION [722]/[732]	000
[703]	___/___/___ (001-048 = USER #)	REMOTE CONTROL #3 - SECTION [723]/[733]	000
[704]	___/___/___ (001-048 = USER #)	REMOTE CONTROL #4 - SECTION [724]/[734]	000
[705]	___/___/___ (001-048 = USER #)	REMOTE CONTROL #5 - SECTION [725]/[735]	000
[706]	___/___/___ (001-048 = USER #)	REMOTE CONTROL #6 - SECTION [726]/[736]	000
[707]	___/___/___ (001-048 = USER #)	REMOTE CONTROL #7 - SECTION [727]/[737]	000
[708]	___/___/___ (001-048 = USER #)	REMOTE CONTROL #8 - SECTION [728]/[738]	000

## BUTTON PROGRAMMING

Four-button Remote Control

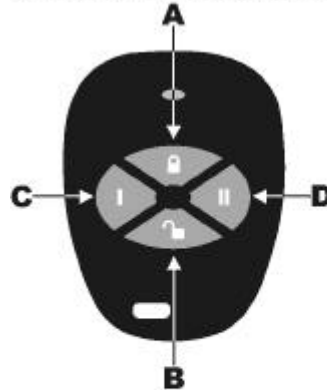

With Liberator Wireless Bus Module  
Model# 349 (900MHz)

With Spectra 1758/EX  
Model# 344 (433MHz)

### Button Options Table

Empty [FORCE]	- Button disabled
1	- Regular Arming
2	- Stay Arming
3	- Instant Arming
4	- Force Arming
5	- Disarm
6	- Disarm when no alarm
7	- Regular Arm and Disarm
8	- Panic 1
9	- Panic 2
A	- Panic 3
B	- PGM Activation (Event Group #7 see PGM Programming on page 9)
C	- PGM Activation (Event Group #8 see PGM Programming on page 9)
D	- PGM Activation (Event Group #9 see PGM Programming on page 9)

Section # Hexa Value: Each digit is a value from 1 to D (see Button Options Table)

[711]	___/___/___/___/___/___/___/___	REMOTE CONTROL #1
	A B C D A+B C+D A+C B+D	
[712]	___/___/___/___/___/___/___/___	REMOTE CONTROL #2
	A B C D A+B C+D A+C B+D	
[713]	___/___/___/___/___/___/___/___	REMOTE CONTROL #3
	A B C D A+B C+D A+C B+D	
[714]	___/___/___/___/___/___/___/___	REMOTE CONTROL #4
	A B C D A+B C+D A+C B+D	
[715]	___/___/___/___/___/___/___/___	REMOTE CONTROL #5
	A B C D A+B C+D A+C B+D	
[716]	___/___/___/___/___/___/___/___	REMOTE CONTROL #6
	A B C D A+B C+D A+C B+D	
[717]	___/___/___/___/___/___/___/___	REMOTE CONTROL #7
	A B C D A+B C+D A+C B+D	
[718]	___/___/___/___/___/___/___/___	REMOTE CONTROL #8
	A B C D A+B C+D A+C B+D	

### WARNING!

Please note that the User Code assigned to the remote control (sections [701] to [708]) must have the same User Options enabled. For example, if you enable the Force Arming button option you must enable the appropriate Force Arming user option. Also, if you enable any of the Panic button options, you must enable the Panic options in the control panel.

## REMOTE CONTROL ASSIGNMENT (Liberator Only)

Section #	Serial #
[721]	___/___/___/___/___/___ REMOTE CONTROL #1
[722]	___/___/___/___/___/___ REMOTE CONTROL #2
[723]	___/___/___/___/___/___ REMOTE CONTROL #3
[724]	___/___/___/___/___/___ REMOTE CONTROL #4
[725]	___/___/___/___/___/___ REMOTE CONTROL #5
[726]	___/___/___/___/___/___ REMOTE CONTROL #6
[727]	___/___/___/___/___/___ REMOTE CONTROL #7
[728]	___/___/___/___/___/___ REMOTE CONTROL #8

**NOTE:** Use the Serial Number Display (see page 23) to find out the serial number of a remote control. To delete a remote control, enter the desired section then enter a value of 000000.

## REMOTE CONTROL ASSIGNMENT (1758 and 1758EX Panels Only)

### Section #

- [731] PRESS A BUTTON ON A REMOTE CONTROL TWICE. YOU WILL HEAR A CONFIRMATION BEEP = REMOTE CONTROL #1
- [732] PRESS A BUTTON ON A REMOTE CONTROL TWICE. YOU WILL HEAR A CONFIRMATION BEEP = REMOTE CONTROL #2
- [733] PRESS A BUTTON ON A REMOTE CONTROL TWICE. YOU WILL HEAR A CONFIRMATION BEEP = REMOTE CONTROL #3
- [734] PRESS A BUTTON ON A REMOTE CONTROL TWICE. YOU WILL HEAR A CONFIRMATION BEEP = REMOTE CONTROL #4
- [735] PRESS A BUTTON ON A REMOTE CONTROL TWICE. YOU WILL HEAR A CONFIRMATION BEEP = REMOTE CONTROL #5
- [736] PRESS A BUTTON ON A REMOTE CONTROL TWICE. YOU WILL HEAR A CONFIRMATION BEEP = REMOTE CONTROL #6
- [737] PRESS A BUTTON ON A REMOTE CONTROL TWICE. YOU WILL HEAR A CONFIRMATION BEEP = REMOTE CONTROL #7
- [738] PRESS A BUTTON ON A REMOTE CONTROL TWICE. YOU WILL HEAR A CONFIRMATION BEEP = REMOTE CONTROL #8

**NOTE:** If you hear rejection beep, an error has occurred or the remote control has already been assigned. To delete a remote control, enter the desired section then press the [FORCE] key.

## REPROGRAM ALL MODULES

- [750] AFTER REMOVING AN EXPANSION MODULE FROM THE COMMUNICATION BUS, THE CONTROL PANEL KEEPS THE MODULE'S PROGRAMMED SECTIONS IN MEMORY. THEREFORE, IF YOU ADD OR REPLACE A MODULE YOU CAN RE-PROGRAM THE MODULE WITH THE SETTINGS SAVED IN THE CONTROL PANEL. TO DO SO, ENTER SECTION [750] AND PRESS [ENTER]. THE KEYPADS WILL BEEP TWICE EVERY SECOND UNTIL THE PROCEDURE IS COMPLETED.

## PARADOX MEMORY KEY

- [900] DOWNLOAD FROM PARADOX MEMORY KEY TO DESTINATION CONTROL PANEL (FOR DETAILS SEE PAGE 5).
- [902] COPY TO MEMORY KEY FROM SOURCE CONTROL PANEL (FOR DETAILS SEE PAGE 5).

# USER OPERATION

## TROUBLE DISPLAY

The Spectra system continuously monitors fourteen possible trouble conditions. When a trouble condition occurs, the [TBL] button or [TRBL] indicator will illuminate on the LED keypads or “Trouble” will appear on the LCD keypad’s screen. Press the [TBL] or [TRBL] button to switch to the *Trouble Display*. The [TBL] button or [TRBL] indicator will flash and lights corresponding to an existing trouble condition will illuminate on the LED keypads (see below) or the appropriate trouble message will appear on the LCD keypad. Press the [CLEAR] button to exit the *Trouble Display*.

Please note that the keypad can be programmed to emit a “BEEP” every 5 seconds whenever a new trouble condition has occurred. Pressing the [TBL] or [TRBL] button will stop the “beeping”.

LED #	Description	Details
[1]	No/Low Battery Failure	The control panel performs a dynamic battery test under load every 60 seconds. This trouble indicates that the back-up battery is disconnected or that the battery should be replaced, as it will not provide adequate back-up current in case of AC loss. This trouble will also appear when the control panel is running on battery power and the battery voltage has dropped to 10.5 volts or lower. This means the battery must be recharged or replaced.
[2]	Wireless Transmitter Low Battery	This means the battery voltage of a <i>Liberator</i> wireless transmitter has dropped to 6.5V or less. Also, the yellow LED on the transmitter can flash to indicate this trouble. The battery should be replaced.
[3]	Power Failure	Upon power failure, the AC LED on all keypads will turn off. The control panel can transmit the report code programmed in section [205]. This report code can be delayed by programming a Power Failure Report Delay in section [086]. The AC LED turns back on as soon as power is restored.
[4]	Bell Disconnected	There is no bell or siren connected to the bell output terminals of the control panel. If you are not using the BELL, connect a 1K $\Omega$ resistor across the bell terminals.
[5]	Maximum Bell Current	The BELL output uses a fuseless circuit and will automatically shut down if the current exceeds 3A with a 1728 or 1728EX or 2.5A with a 1758 or 1758EX. After opening the short or reducing the load, the bell current is restored upon the following alarm generation. This trouble indicator will only appear when a condition has occurred that would activate the bell output (e.g. during an alarm).
[6]	Maximum Auxiliary Current	The auxiliary output uses a fuseless circuit to protect the power supply against current overload and automatically shuts down if the current exceeds 1.1A. After opening the short or reducing the load, the panel will restore power to the auxiliary output.
[7]	Communicator Report Fail	The control panel has failed all attempts to communicate with the central monitoring station.
[8]	Timer Loss	The control panel’s internal clock must be re-programmed. To re-program the timer press the [8] key and enter the current time using the 24-hour clock (i.e. 8:30PM = 20:30).
[9]	Tamper/Zone Wiring Fail	If the Tamper Recognition options are enabled, this trouble indicates a wiring problem on one or more zones or that the cover has been removed on one or more wireless transmitters. In order to provide line short recognition the zone connections must have EOL resistors. If you press the [9] key, the keypad will display which zones are in trouble. To clear the trouble, you must enter your installer code.
[10]	Telephone Line Monitoring	If the Telephone Line Monitoring (TLM) feature is enabled (see section [135]), this trouble indicates that the control panel has not detected the presence of a telephone line for 30 sec.
[STAY] OR [11]	Fire Loop Trouble	Denotes a wiring problem on zone 3, if defined as a Fire Zone.
[FORCE] OR [16]	Keypad Fault	If the keypad is no longer communicating with the control panel, the [TBL] or [TRBL] will flash, the [FORCE] key will illuminate (the LCD keypad displays “Keypad Fault”) and the keypad will emit four consecutive beeps at 5-second intervals. Press any key on the keypad to terminate the “beeping” sequence. When communication has been restored, the system will revert to previous status.
[BYP] OR [12]	Module Loss	A <i>Liberator</i> or zone module is no longer communicating with the control panel.
[MEM] OR [13]	Wireless Transmitter Supervision Loss	One or more wireless transmitters are no longer communicating with the receiver. If you press the [MEM] key, the keypad will display which zones are in trouble.

## PARTITIONING

The **Spectra** system is equipped with a partitioning feature which can divide the alarm system into two distinct areas identified as Partition 1 and Partition 2. Partitioning can be used in installations where shared security systems are more practical, such as an office/warehouse building. **If the system is not partitioned, all User Codes and features will be recognized as belonging to partition 1.**

### **How does a partitioned system work?**

- Users can only arm/disarm partitions to which they have been assigned.
- Only zones assigned to Partition 1 will arm/disarm when Partition 1 is armed or disarmed.
- Only zones assigned to Partition 2 will arm/disarm when Partition 2 is armed or disarmed.
- Some of the system's features can be programmed separately for each partition.

## PROGRAMMING ACCESS CODES

Access Codes are personal identification numbers that allow users to enter certain programming modes, arm or disarm the alarm system as well as activate or deactivate PGMs. The **Spectra** security system supports the following:

**System Master Code** can arm or disarm any partition using any arming method and can create, modify or delete any *User Access Code*. Only the System Master Code can modify or delete User Access Codes assigned to both partitions.

**Master Code 1** is permanently assigned to partition 1 and can be used to create, modify or delete *User Access Codes* that are assigned to partition 1.

**Master Code 2** is permanently assigned to partition 2 (except when partitioning is disabled, *Master Code 2* will be assigned to partition 1) and can be used to create, modify or delete *User Access Codes* that are assigned to the same partition.

**45 User Access Codes** (including 1 Duress code)

### **How Do I Program Access Codes?**

- 1) Press [ENTER]
- 2) Key in the [SYSTEM MASTER CODE] or [MASTER CODE]
- 3) Key in 3-digit [SECTION] (see *Table* below)
- 4) Key in new 4 or 6-digit [ACCESS CODE]  
[ENTER] flashes. Return to step 3

### **How Do I Delete Access Codes?**

- 1) Repeat steps 1 to 3 (see above)
- 2) Press the [FORCE] button once for each digit in the access code (4 or 6 times) until the keypad emits a "CONFIRMATION BEEP"

Section	User Codes
[001]	User Code 001 = <i>System Master Code</i>
[002]	User Code 002 = <i>Master Code 1</i>
[003]	User Code 003 = <i>Master Code 2</i>
[004] to [047]	<i>User Code 004 to User Code 047</i>
[048]	<i>User Code 048 or Duress Code</i>



## DISARMING & DEACTIVATING AN ALARM

To disarm an already armed system or to deactivate an alarm simply key in a valid access code. Program a designated entry/exit point, such as the front door or the garage door with an *Entry Delay Timer*. When these entry/exit point are opened (breached), it will set off a timer. The system will not generate an alarm until this timer elapses, giving users enough time to enter the premises and disarm the system. Any user can disarm the system, except users have been assigned the *Arm Only Option*.

### **How Do I Disarm the System or Deactivate an Alarm?**

- 1) Key in your **[ACCESS CODE]**  
*The arm or alarm indication will turn off and the keypad will emit a "CONFIRMATION BEEP".*
- IF YOU HAVE ACCESS TO BOTH PARTITIONS:
- 2) Press the button corresponding to the partition you wish to *Disarm* or to *Disarm* both partitions, press the **[1]** key then after the confirmation beep press the **[2]** key.

## REGULAR ARMING

This method, commonly used for day-to-day arming, will arm all the zones in the selected partition.

### **How Do I Regular Arm?**

- 1) Green "READY" indicator must be illuminated. Unless the system is partitioned, in which case all zones in the desired partition must be closed.
  - 2) Key in a valid **[ACCESS CODE]**
- IF YOU HAVE ACCESS TO BOTH PARTITIONS:
- 3) Press the button corresponding to the partition you wish to *Arm*. To *Arm* both partitions, press the **[1]** key then after the confirmation beep press the **[2]** key.

If you make a mistake, the keypad will emit a "REJECTION BEEP". When you have correctly armed the system, the appropriate "ARM" indication will turn on and the *Exit Delay* will be initiated. Please note that *Regular Arming* can also be activated using *Auto-Arming*, a *Keyswitch* or using *One-Touch Arming*.

## STAY ARMING

This method allows users to remain in the protected area while partially arming the system. For example, when going to sleep at night, entry/exit points like doors and windows can be armed while other zones like motion detectors remain deactivated. Please note that *Fire Zones* can not be bypassed.

### **How Do I Stay Arm?**

- 1) All zones in the desired partition (except *Stay Zones*) must be closed.
  - 2) Press the **[STAY]** button
  - 3) Key in a valid **[ACCESS CODE]**
- IF YOU HAVE ACCESS TO BOTH PARTITIONS:
- 4) Press the button corresponding to the partition you wish to *Stay Arm*. To *Stay Arm* both partitions, press the **[1]** key then after the confirmation beep press the **[2]** key.

If you make a mistake, the keypad will emit a "REJECTION BEEP". When you have correctly *Stay Armed* the system, the appropriate "ARM" indication will appear and the *Exit Delay* will be initiated. *Stay Arming* can also be activated using *Auto-Arming*, *Keyswitch Arming* or using *One-Touch Arming*. Also note that the User Code must have the *Stay Arming Option* enabled.

## INSTANT ARMING

After *Stay Arming* the system and during its *Exit Delay*, press and hold the [STAY] button for 3 seconds. You should hear a "CONFIRMATION BEEP". This will switch all armed zones to *Instant zones*.

### If you have access to both partitions:

To Instant Arm one partition, press [STAY] + [ACCESS CODE] + [SELECT PARTITION] + [CLEAR] + press & hold [STAY]

To Instant Arm both partitions, press [STAY] + [ACCESS CODE] + [1] + [2] + press & hold [STAY]

## FORCE ARMING

*Force Arming* allows users to rapidly arm the system, without having to wait for all zones in the system to be closed. *Force Arming* is commonly used when a motion detector is protecting the area occupied by a keypad. Therefore, when arming the system, if the motion detector is set as a *Force Zone*, the control panel will ignore the zone and allow users to arm the system even if the zone is open. Any open *Force Zones* at the time of arming will be considered "deactivated" by the control panel. If during this period a "deactivated" zone is closed, the control panel will revert that zone to "active" status, hence, will generate an alarm if breached.

### **How Do I Force Arm?**

- 1) All zones in the desired partition (except *Force Zones*) must be closed.
- 2) Press the [FORCE] button
- 3) Key in a valid [ACCESS CODE]

### IF YOU HAVE ACCESS TO BOTH PARTITIONS:

- 4) Press the button corresponding to the partition you wish to *Arm*. To *Arm* both partitions, press the [1] key then after the confirmation beep press the [2] key.

If you make a mistake, the keypad will emit a "REJECTION BEEP". When correctly *Force Armed*, the appropriate "ARM" indication will appear and the *Exit Delay* will be initiated. Please note that *Force Arming* can also be activated using *One-Touch Force Arming*. Also note that the *Access Code* must have the *Force Arming Option* enabled.

## MANUAL BYPASS PROGRAMMING

*Manual Bypass Programming* allows users to program the alarm system to ignore ("deactivate") specified zones the next time the system is armed. Please note that *Fire Zones* can not be bypassed and that *Manual Bypass Programming* can also be activated using *One-Touch Bypass Programming*.

### **How do I Program Bypass Entries?**

- 1) Press the [BYP] button.
- 2) Key in a valid [ACCESS CODE]\*
- 3) Select one or more [ZONES] you wish to bypass
- 4) Once you have entered the desired bypass entries, press the [ENTER] button to accept these entries.

\*If you have access to both partitions, press the button corresponding to the desired partition. The *Access Code* must have the *Bypass Programming Option* enabled.

## BYPASS RECALL FEATURE

After disarming the system, the control panel will erase the bypass entries. By using the *Bypass Recall Feature*, you can reinstate the previous bypass entries saved in memory. This eliminates the need to manually program the bypass entries every time you arm the system.

### **How Do I Recall Bypass Entries?**

- 1) Press the **[BYP]** button.
- 2) Key in your **[ACCESS CODE]\***
- 3) Press the **[BYP]** button.
- 4) Press the **[ENTER]** button.

\*If you have access to both partitions, press the button corresponding to the desired partition. The *Access Code* must have the *Bypass Programming Option* enabled.

## ONE-TOUCH ARMING

*One-Touch Arming* allows users to arm the system without the use of an access code, simply press and hold a button. *One-Touch Arming* can be used to allow specific individuals like service personnel (i.e. cleaners, maintenance) to arm the system when leaving the protected area, without giving them access to any other alarm system operations.

### **One-Touch Regular Arming**

Press and hold the **[ENTER]** button for 3 seconds\* to arm all zones in the partition.

### **One-Touch Force Arming**

Press and hold the **[FORCE]** button for 3 seconds\* to bypass any open *Force Zones*.

### **One-Touch Bypass Programming**

Press and hold the **[BYP]** button for 3 seconds\* to access *Bypass Programming Mode*.

### **One-Touch Stay Arming**

Press and hold the **[STAY]** button for 3 seconds\* to arm all zones not defined as *Stay Zones*.

**Fast Exit** - When the system is already Stay Armed:

*To Exit and Stay Arm:* Press and hold the **[STAY]** button for 3 seconds\*. The system will switch to *Exit Delay* mode. At the end of the *Exit Delay* period, the system will return to *Stay Arming*.

*To Exit and Regular Arm:* Press and hold the **[ENTER]** button for 3 seconds\*. The system will switch to *Exit Delay* mode. At the end of the *Exit Delay* period, the control panel will switch to *Regular Arming*.

*To Exit and Force Arm:* Press and hold the **[FORCE]** button for 3 seconds\*. The system will switch to *Exit Delay* mode. At the end of the *Exit Delay* period, the control panel will switch to *Force Arming*.

\* If you have access to both partitions after activating a one-touch feature, press the button corresponding to the desired partition. To select both partitions, press the **[1]** key then after the confirmation beep press the **[2]** key.

## KEYSWITCH ARMING

A keyswitch can be used to arm and disarm the system. Assign the keyswitch to a specific partition and program the keyswitch to *Stay* or *Regular Arm* the assigned partition. Also program the keyswitch to function as a Maintained or Momentary keyswitch. To arm the system using a Maintained Keyswitch, set the keyswitch to the “on” position. To disarm the system set the keyswitch to the “off” position. To arm the system using a Momentary Keyswitch, set the keyswitch to the “on” position then turn it back to the “off” position. Repeating this sequence will disarm the system.

## PANIC ALARMS

In case of emergency, the **Spectra** system provides up to three panic alarms. These panic alarms, if programmed, will immediately generate an alarm after pressing and holding two specific buttons for two seconds, as described below.

Press and hold buttons **[1]** and **[3]** for a panic alarm.

Press and hold buttons **[4]** and **[6]** for a panic or medical alarm.

Press and hold buttons **[7]** and **[9]** for a panic or fire alarm.

## AUTO-ARMING

You can program the *Spectra* alarm panel to automatically arm at a specific time everyday or if no movement is detected for a specified period of time. The user is only allowed to program the Auto Arm Timer. *Please note that the control panel will enter a 60-second Exit Delay period before arming the system. At this point, Auto-Arming can be cancelled by entering a valid access code.*

## ALARM MEMORY DISPLAY

A record of all alarm situations that occur will be stored in memory. After disarming the system, pressing the [MEM] button will display which zones were in alarm during the last armed period. To exit the *Alarm Memory Display*, press the [CLEAR] button. The control panel will erase the contents of the alarm memory every time the system is armed.

## PROGRAMMING CHIME ZONES

This feature allows users to program which zones will be “*Chime Enabled*”. A “*Chime Enabled*” zone will cause the keypad to emit a rapid intermittent beep tone (BEEP-BEEP-BEEP-BEEP) advising the user every time it is opened. Each keypad must be Chime Programmed separately. Keypad chimes must be re-programmed if the system suffers a total power loss.

### 10-Zone LED Keypad:

Press and hold any button from [1] to [10] for 3 seconds to activate or deactivate *Chiming* for zones 1 to 10. For example, press and hold the [1] button to enable chiming on zone 1. If after pressing and holding a button, the keypad emits a confirmation beep, this means the chime feature has been enabled for that zone. If the keypad emits a rejection beep, this means the chime feature has been disabled for the corresponding zone.

### 16-Zone LED Keypad:

Press and hold the [9] button. Enter the 2-digit (01 to 16) zone number(s). When the corresponding LED is on, the zone is chimed. When the corresponding LED is off, the zone is unchimed. When the desired zones are chimed, press [ENTER].

### LCD Keypad:

Press and hold the [9] button. Enter the 2-digit (01 to 16) zone number(s), or use the arrow keys to scroll through the zones. and when the appropriate zone is displayed, press the [FNC1] button. When the desired zones are chimed, press [ENTER].

## KEYPAD MUTING

Press and hold the [CLEAR] button for 3 seconds to enable or disable keypad muting. When muted, the keypad will only “beep” when a button is pressed or when the keypad emits a rejection or confirmation beep. All other “beep” functions are disabled.

## QUICK FUNCTION KEYS

### **Installer Test Mode**

[ENTER] + [INSTALLER CODE] + [TBL] or [TRBL]

The Installer Test Mode allows you to perform walk tests where the bell/siren will squawk once to indicate an open zone and twice to indicate a closed zone. To enter this mode, press [ENTER] + [INSTALLER CODE] + [TBL] or [TRBL]. The keypad will emit a confirmation beep. To disable this mode, press the [TBL] or [TRBL] key again. The keypad will emit a rejection beep.

### **Test Report**

[ENTER] + [INSTALLER/MASTER CODE] + [MEM]

Sends the “Test Report” report code programmed in section [211] to the central station.

### **Call WinLoad Software**

[ENTER] + [INSTALLER/MASTER CODE] + [BYP]

This feature is used to establish communication between the control panel and a computer using the WinLoad Software. After entering this mode the control panel will dial the telephone number programmed in section [150].

### **Cancel Communication**

[ENTER] + [INSTALLER/MASTER CODE] + [STAY]

Cancels all communication until the next reportable event. If the Master Code was used, only communication with WinLoad would be cancelled.

### **Answer WinLoad Software**


[ENTER] + [INSTALLER/MASTER CODE] + [FORCE]

Forces the control panel to pick-up an incoming telephone call.


# HARDWARE CONNECTIONS

## SINGLE ZONE INPUTS


**N.C. Contacts, No EOL**

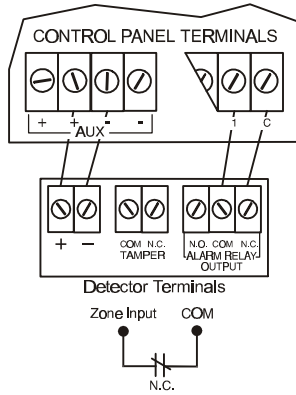


**N.C., With EOL  
UL/ULC Configuration**

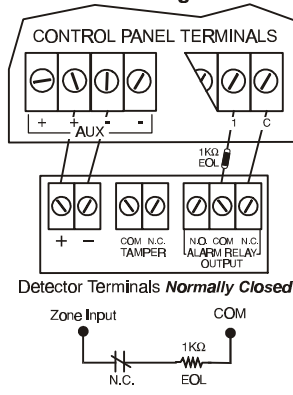


**N.O., With EOL  
UL/ULC Configuration**

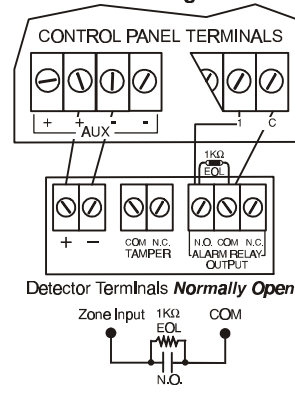

**N.C. Contacts, No EOL,  
With Tamper Recognition**

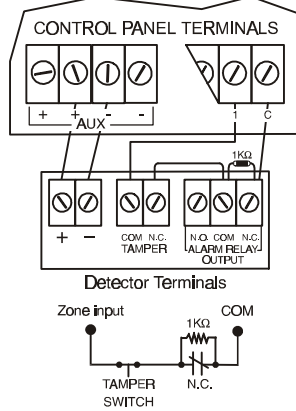


**N.C., With EOL, With Tamper &  
Wire Fault Recognition (UL/ULC)**

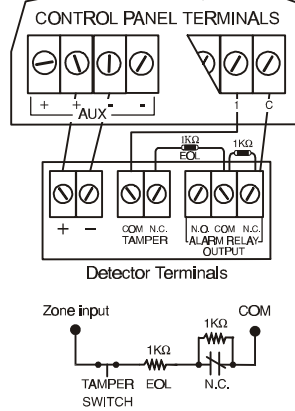


## DOUBLE ZONE INPUTS (with ATZ option only)


**N.C. Contact, No EOL Resistor**

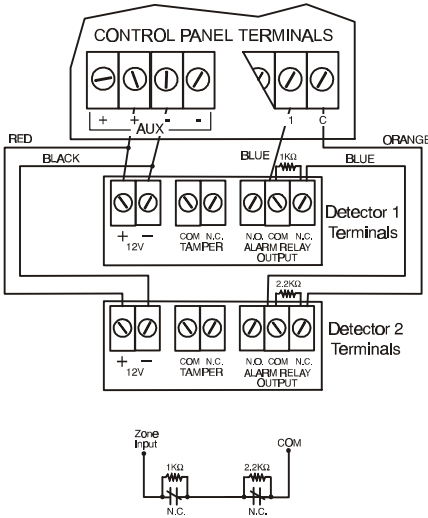


**N.C. Contact, No EOL,  
With Tamper Recognition**

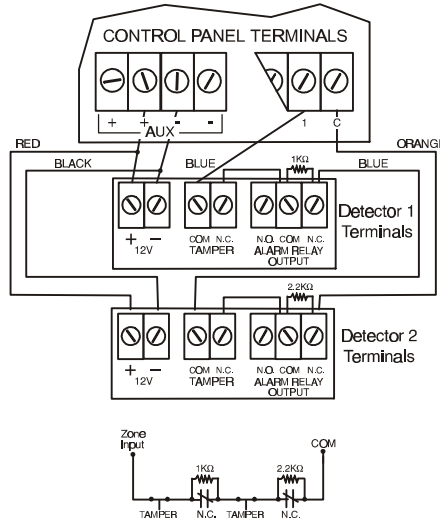

**N.C. Contacts, With EOL, With Tamper  
& Wire Fault Recognition (UL/ULC)**

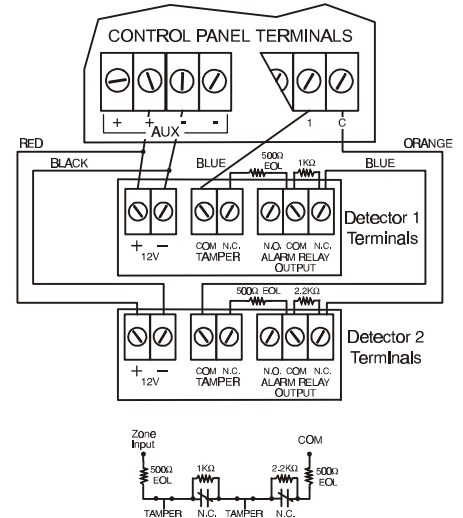


## CONNECTING A KEYSWITCH

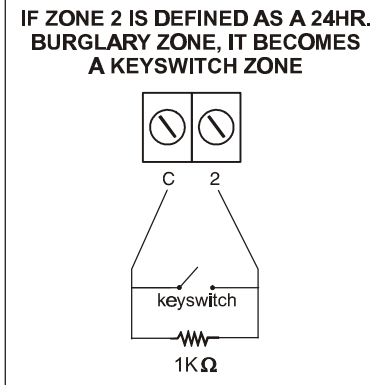


## CONNECTING FIRE CIRCUITS


If zone 3 is defined as a 24Hr. Burglary Zone, it becomes a Standard Fire Zone. If zone 3 is defined as a 24Hr. Buzzer Zone, it becomes a Delayed Fire Zone

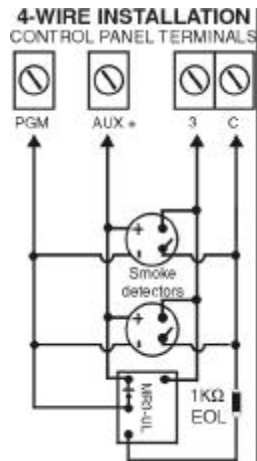


## PGM CONNECTIONS

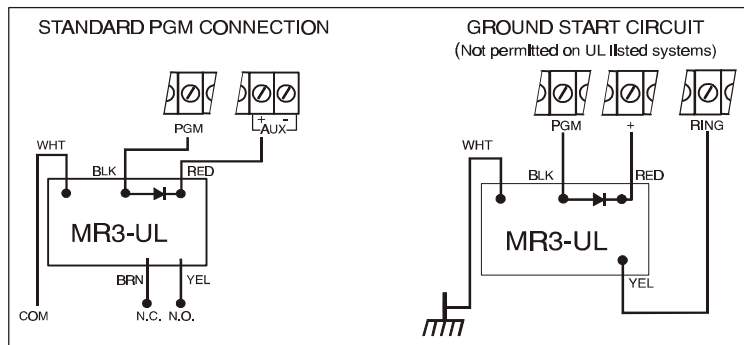


## CONNECTING A LIBERATOR WIRELESS BUS MODULE (SPC-319)

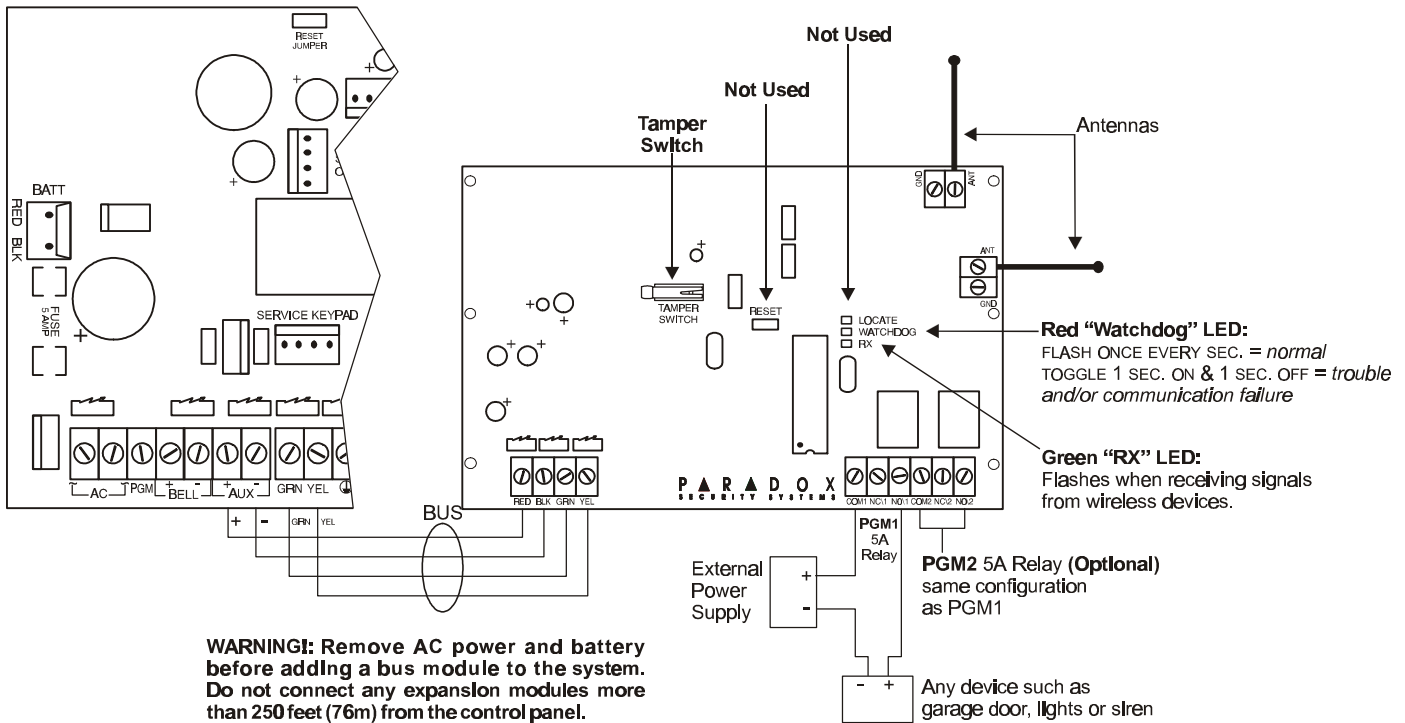

## CONNECTING A ZONE EXPANSION MODULE (SPC-ZX4 AND SPC-ZX8)

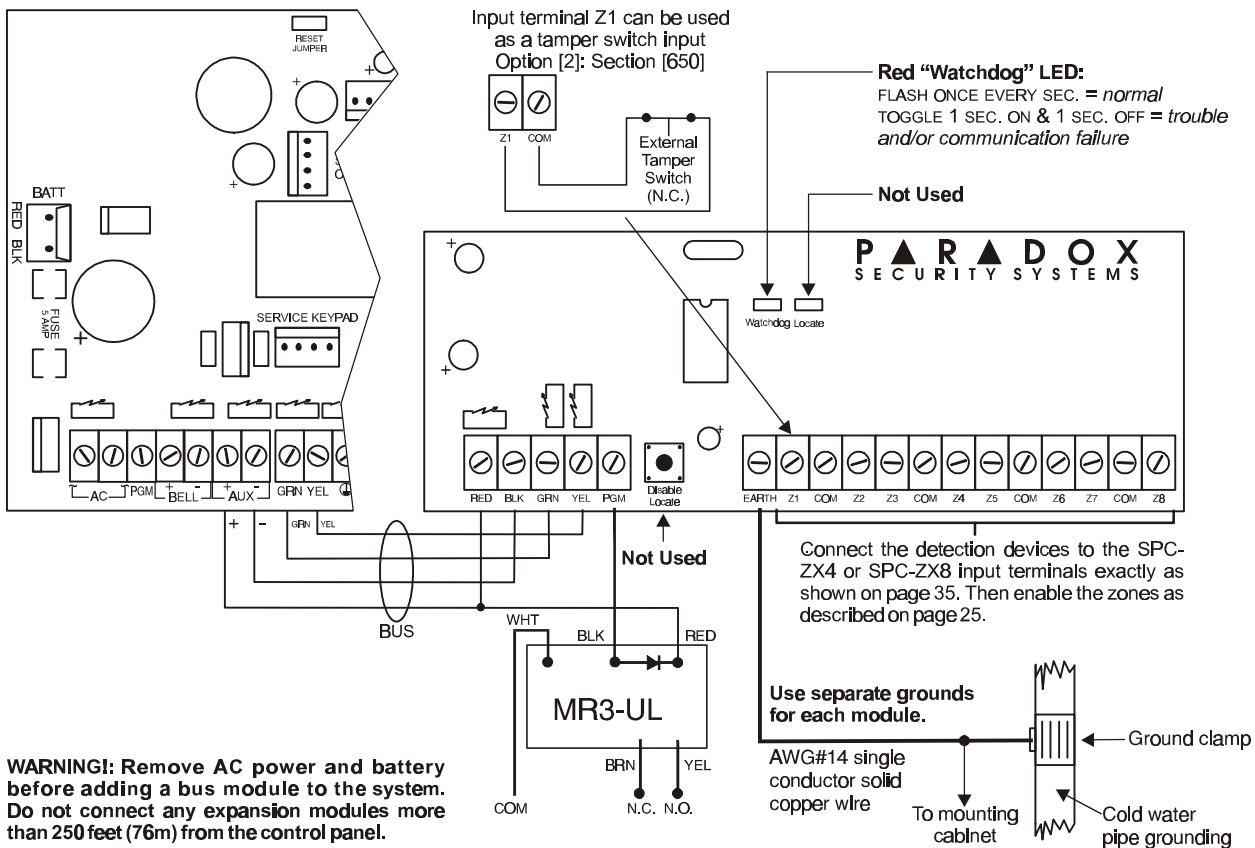

# SPECTRA 1728 AND 1728EX PCB LAYOUT

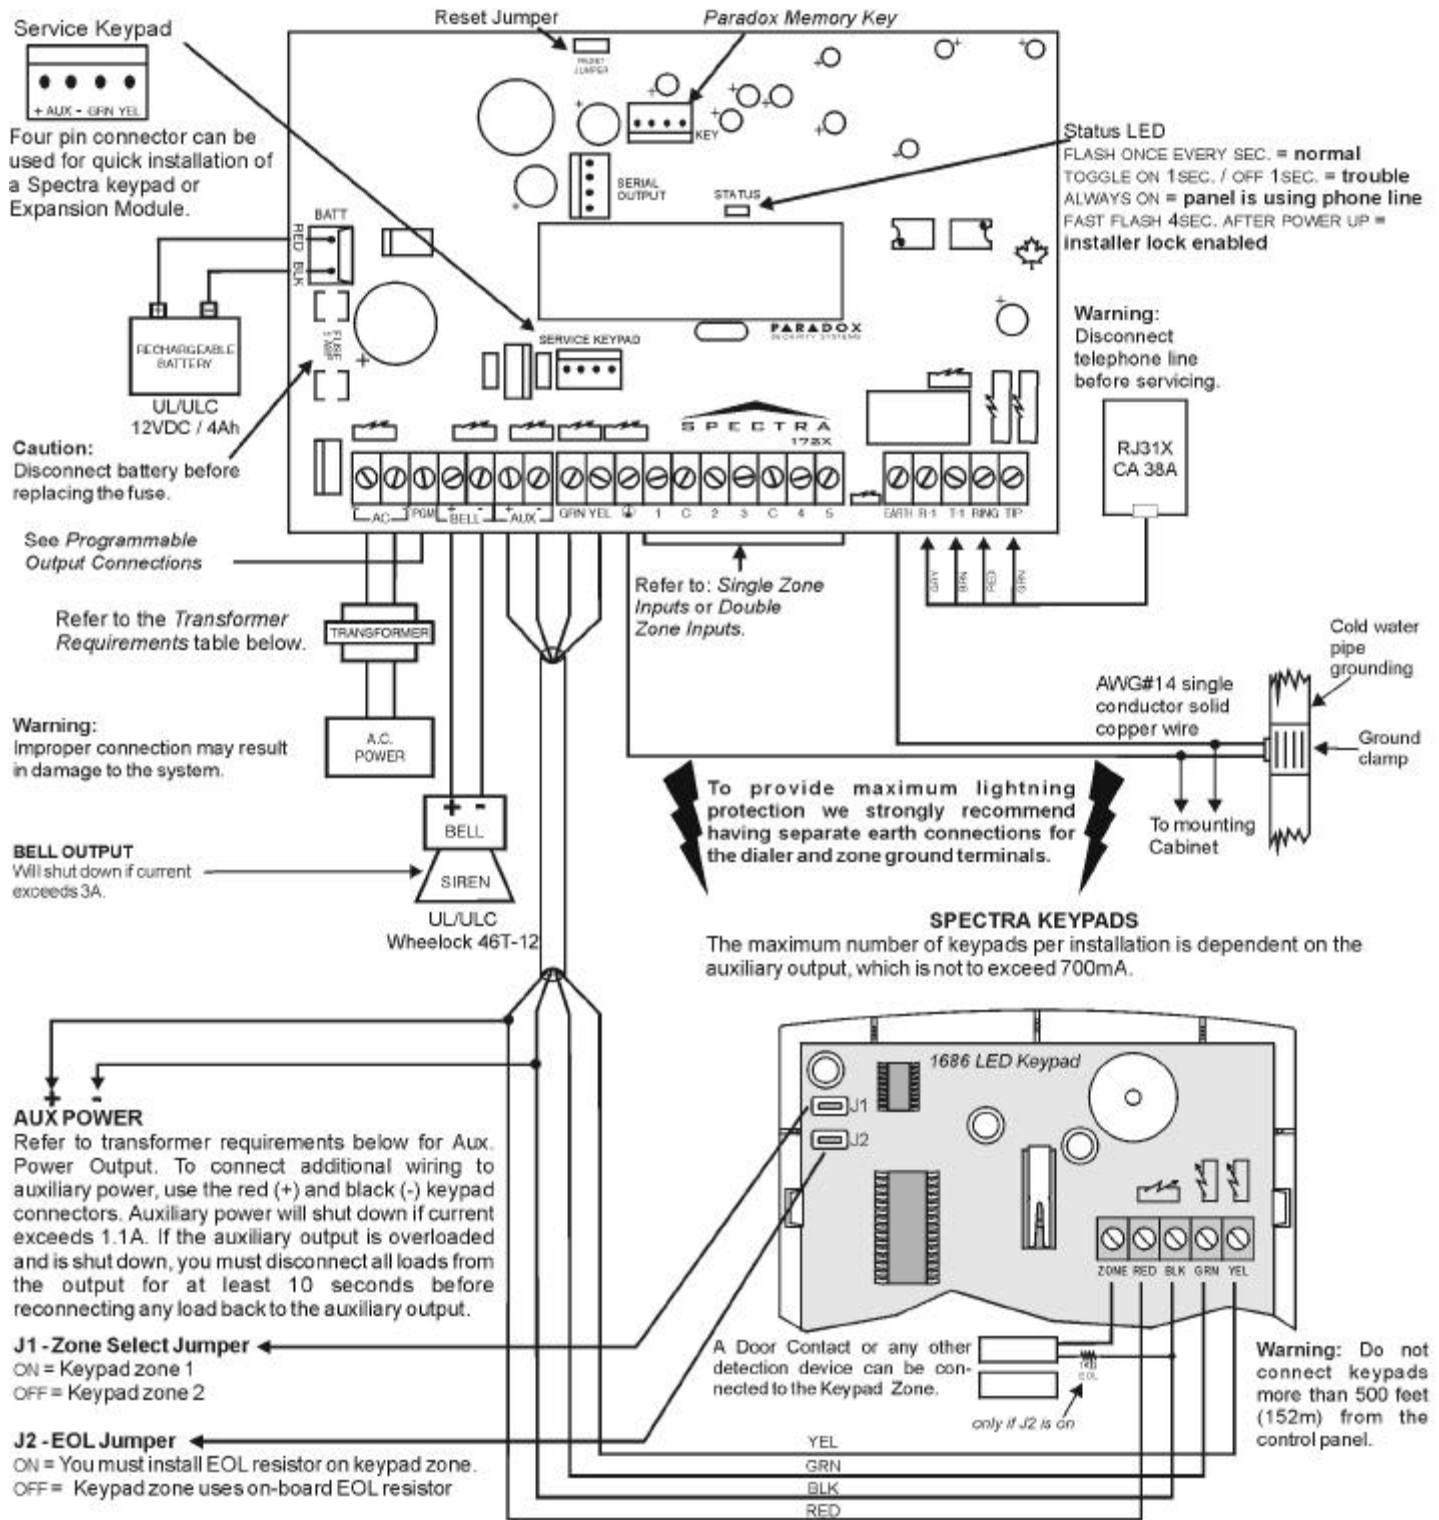

All outputs are Class 2 or power-limited, except for the battery terminal. The Class 2 and power-limited fire alarm circuits shall be installed using CL3, CL3R, CL3P, or substitute cable permitted by the National Electrical Code, ANSI/NFPA 70.


## TRANSFORMER REQUIREMENTS TABLE

Transformer:	Min. 16VAC 20VA UL: Amseco XP-1620	Rec. 16VAC 40VA UL: Amseco XP-1640
Spectra DC Power Supply rated at:	1.2A	1.5A
Auxiliary Supply can provide a maximum of:	typ: 600mA, max: 700mA	typ: 600mA, max: 700mA
Acceptable Battery Charge Currents (section [127] option [5])	350mA	350mA/700mA



# SPECTRA 1758 AND 1758EX PCB LAYOUT


Other than the location of the parts on the board and the items that have been indicated below, connections to these control panels are identical to those on page 38.

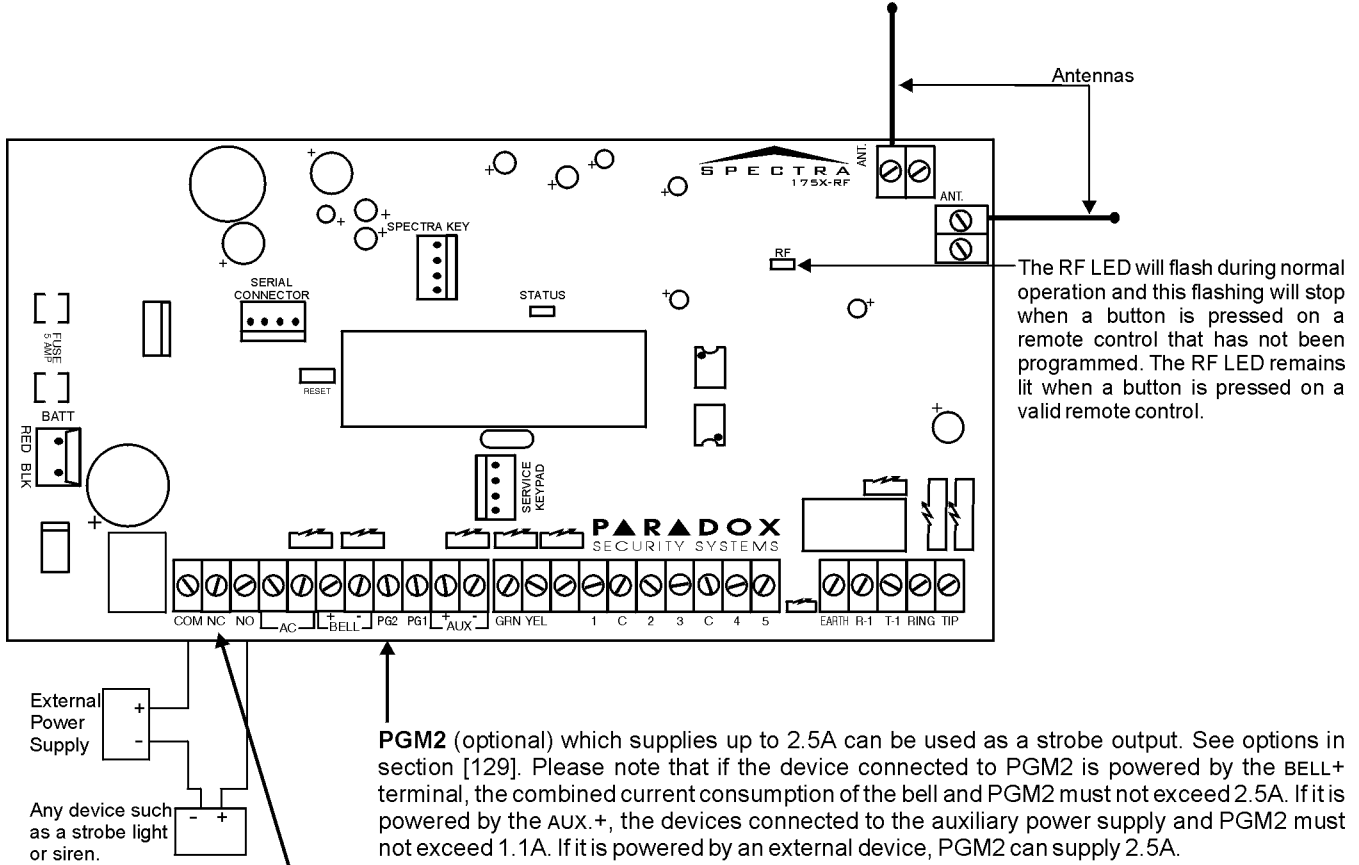

Optional Alarm Relay (5A) can be programmed to follow the BELL output or the Global PGM (option [7] in section [127]).

## CONNECTING MORE THAN TWO KEYPADS

If there are more than 2 keypads connected to the control panel and at least one keypad zone is being used, connect as shown and program as described in the *Spectra Control Panels Reference & Installation* manual.

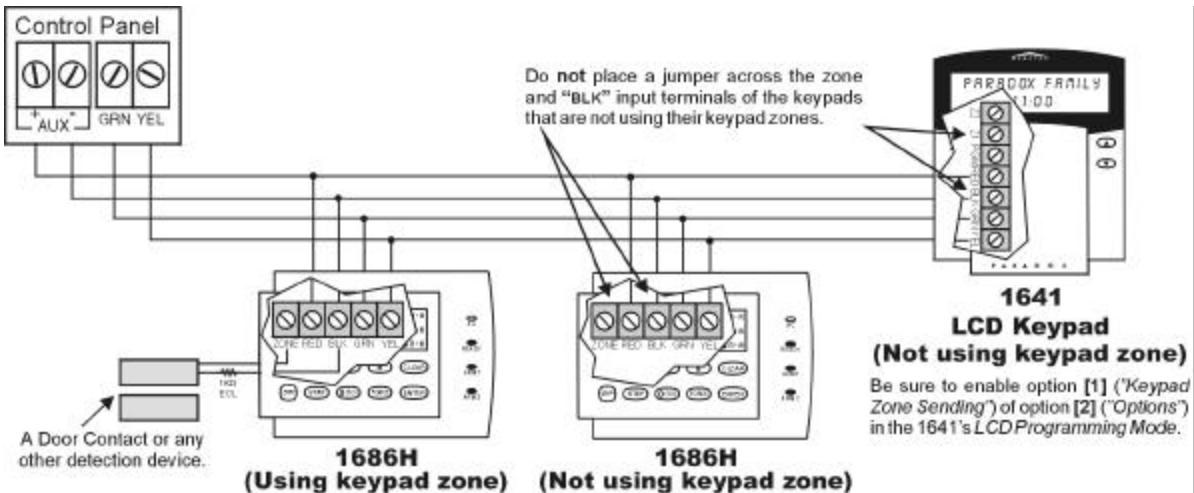

**P ▲ R ▲ D O X<sup>®</sup>**  
**S E C U R I T Y S Y S T E M S**  
780 Industrial Blvd., St-Eustache, Montreal, Quebec, Canada J7R 5V3  
Fax: (450) 491-2313 <http://www.paradox.ca>

Printed in Canada 04/01  
SPEC-08